My Woodland Playhouse

Assembly Instructions

© 2010 KidKraft, LP

Please retain this information for future reference

KidKraft Item #00155

To order replacement parts, please visit www.kidkraft.com

ADULT SUPERVISION REQUIRED.
FOR OUTDOOR USE ONLY.

2-10 years

***Requires 2 people for assembly.

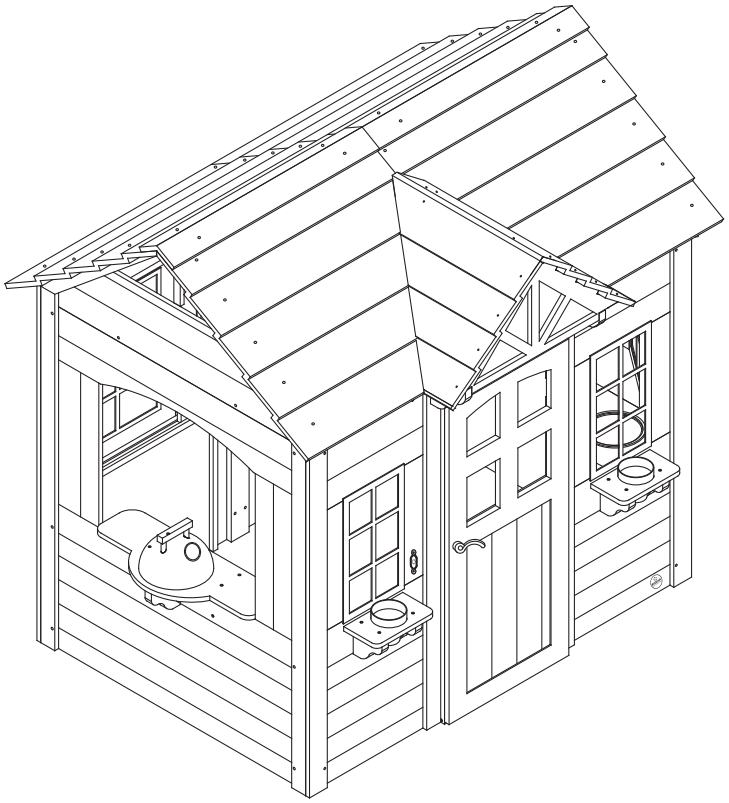

OBSERVE THE FOLLOWING STATEMENTS AND WARNINGS TO REDUCE THE LIKELIHOOD OF SERIOUS OR FATAL INJURY:

- Do not leave children unattended.
- Do not allow children to sit, stand, play or climb on any elevated surface. Doing so may cause the product to become unstable.
- Do not leave standing water while not in use.
- Tightly secure connections. Advise children not to use product until properly assembled.
- Inspect the product periodically for loose or damaged components.
- Instruct children not to use the playhouse in a manner other than intended.
- Dress children appropriately with well-fitting shoes and no loose-fitting clothing.
- Do not attach items to the equipment that are not specifically designed for use with the playhouse, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- Instruct children to remove any bike or other sports helmets prior to playing in the playhouse.

INSTALLATION

- Place the playhouse on level ground, not less than 6 ft (1.8 m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

Customer Service
1-800-933-0771
www.kidkraft.com

Before calling customer service, please locate the batch code number (example: 2693/65006/04) found on the bottom or back of your product.

⚠ WARNING:
The toy is to be assembled by an adult.
In unassembled state contains potentially hazardous sharp edges and small parts, so please keep out of baby's reach.

⚠ WARNING:
CHOKING HAZARD
Small parts and sharp points, not suitable for children under 3 years.

My Woodland Playhouse

Assembly Instructions

© 2010 KidKraft, LP

Please retain this information for future reference

KidKraft Item #00155

To order replacement parts, please visit www.kidkraft.com

PARTS LIST:

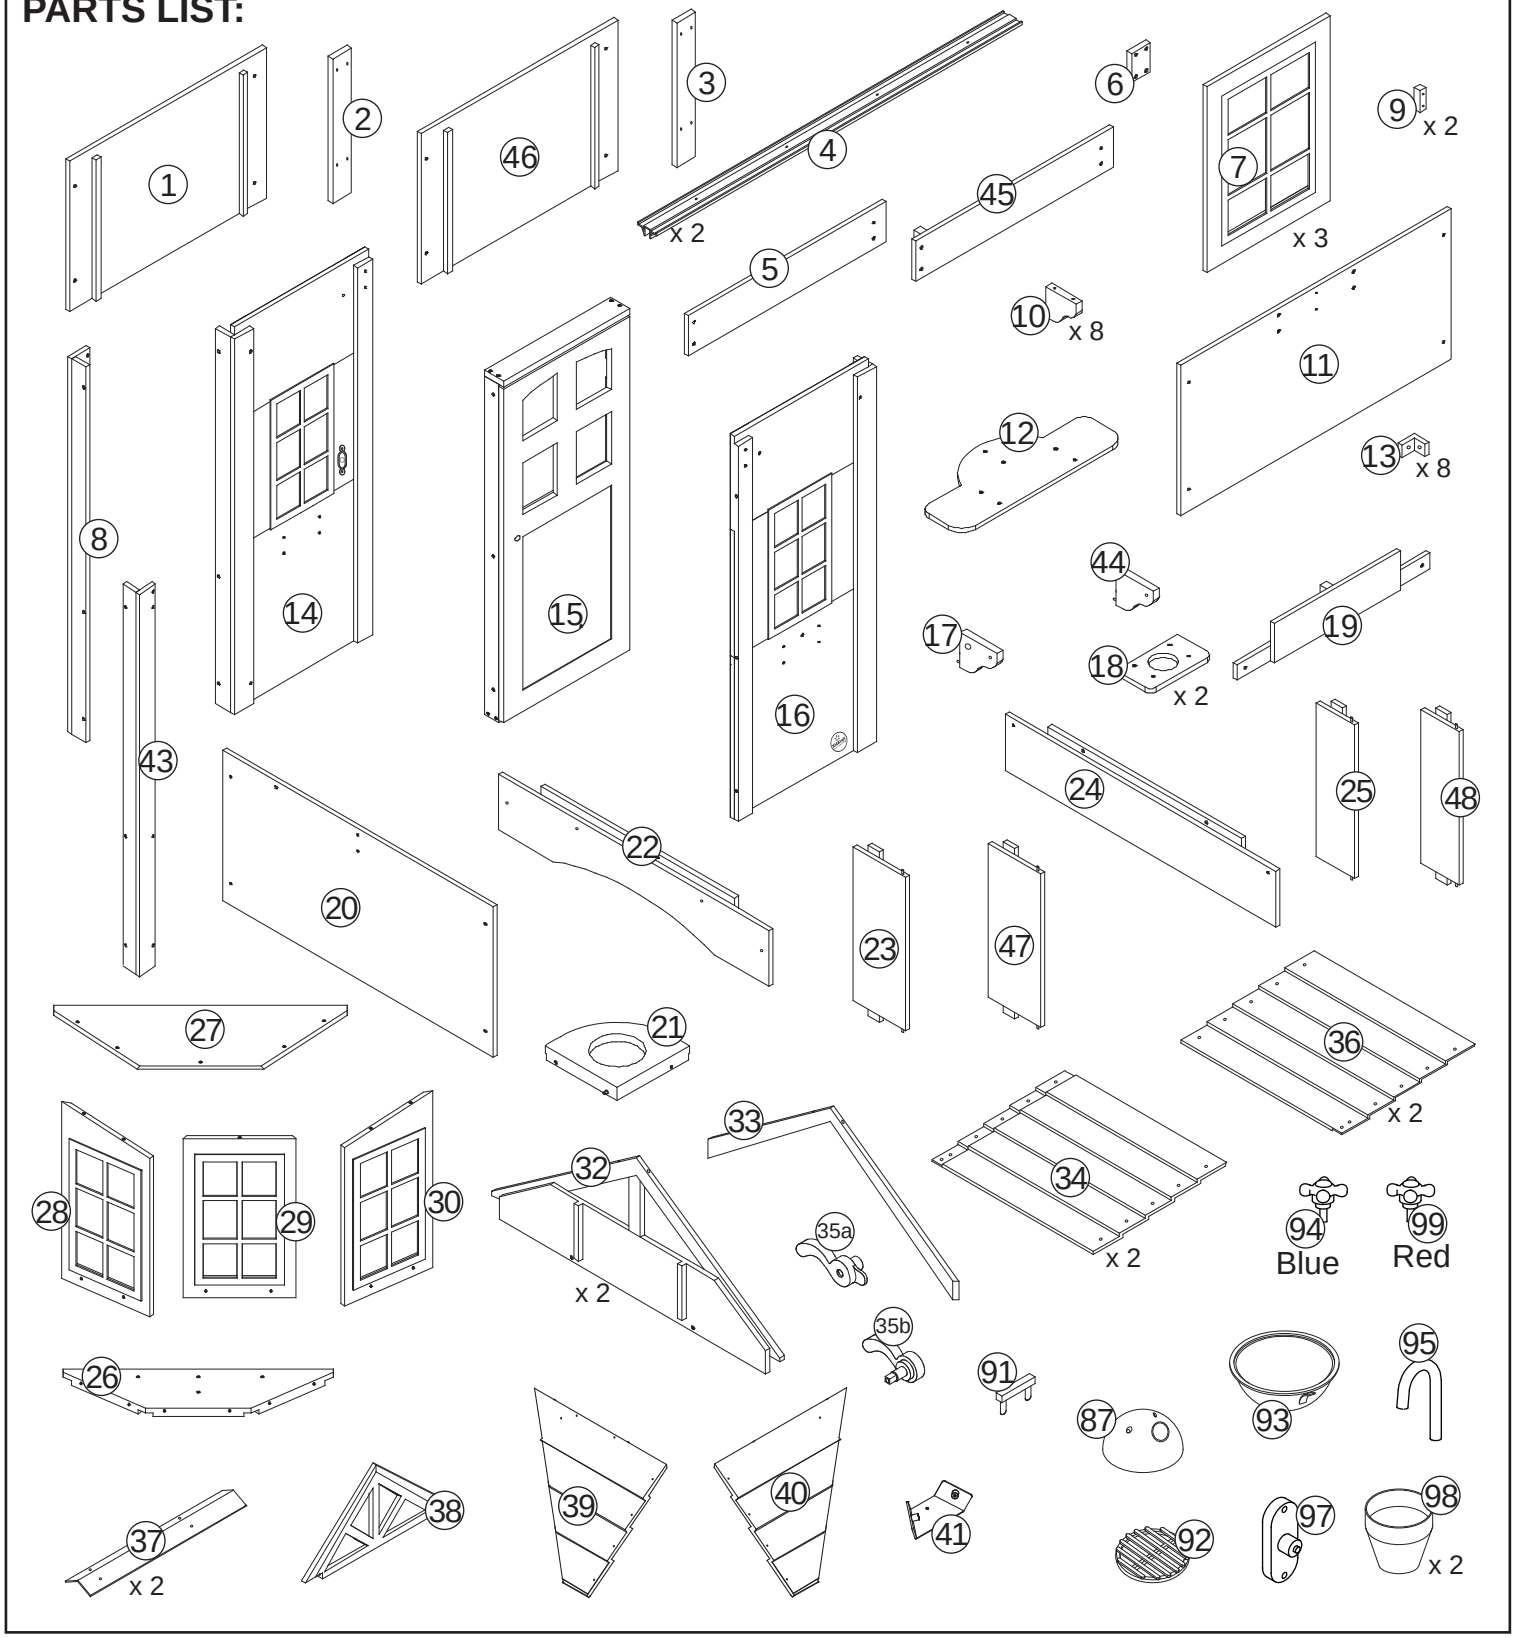

Before calling customer service, please locate the batch code number (example: 2693/65006/04) found on the bottom or back of your product.

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

HARDWARE

A. Cross Dowel Bolt
x 22 pieces



(1 9/16 inches / 40 mm)

B. Wood Screw
x 57 pieces

(15/16 inches / 23 mm)

C. Cross Dowel Bolt
x 26 pieces



(1 1/8 inches / 28 mm)

D. Wood Screw
x 20 pieces

(1 1/4 inches / 31 mm)

E. Wood Screw
x 4 pieces

(1 1/8 inches / 28 mm)

F. Cross Dowel Bolt
x 2 pieces

(2 3/4 inches / 70 mm)

G. Cross Dowel Nut
x 2 pieces

H. Bolt x 2 pieces

(1 inch / 25 mm)

I. Washer x 2 pieces

J. Cross Dowel Bolt
x 2 pieces

(1 3/8 inches / 35 mm)

M. Wood Screw
x 30 pieces

(1/2 inches / 12 mm)

N. Wood Screw
x 48 pieces

(15/16 inches / 23 mm)

Allen Wrench x 1 piece

The following tools
(not included) are
required for assembly :



Phillips® screwdriver

Step 1

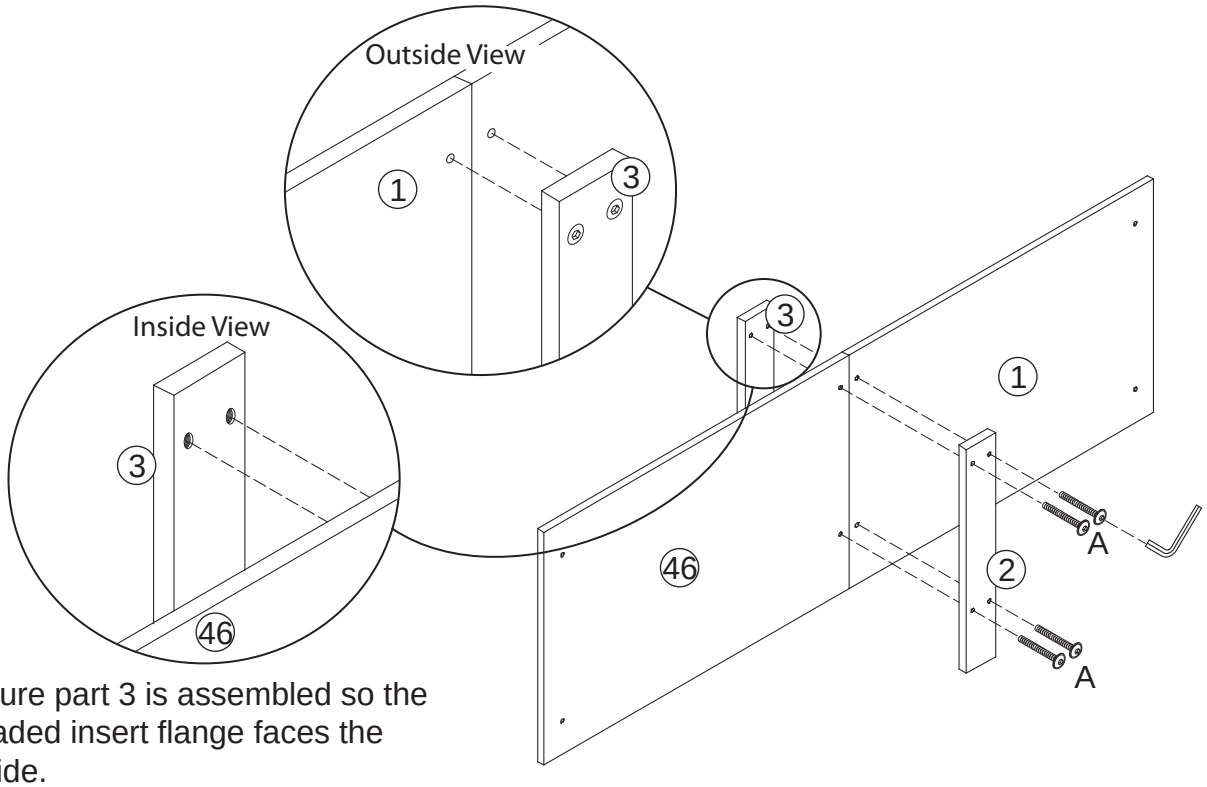

Be sure part 3 is assembled so the threaded insert flange faces the outside.

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Step 2

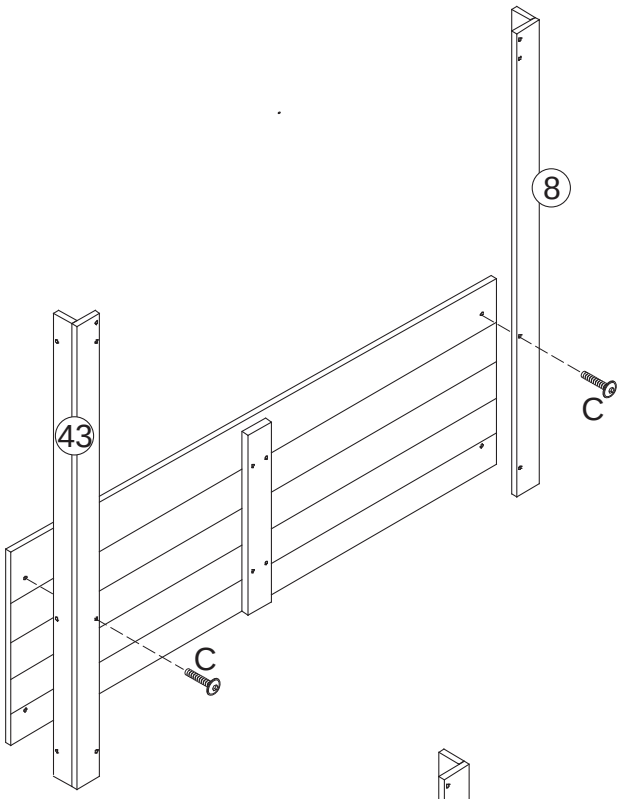

Step 3

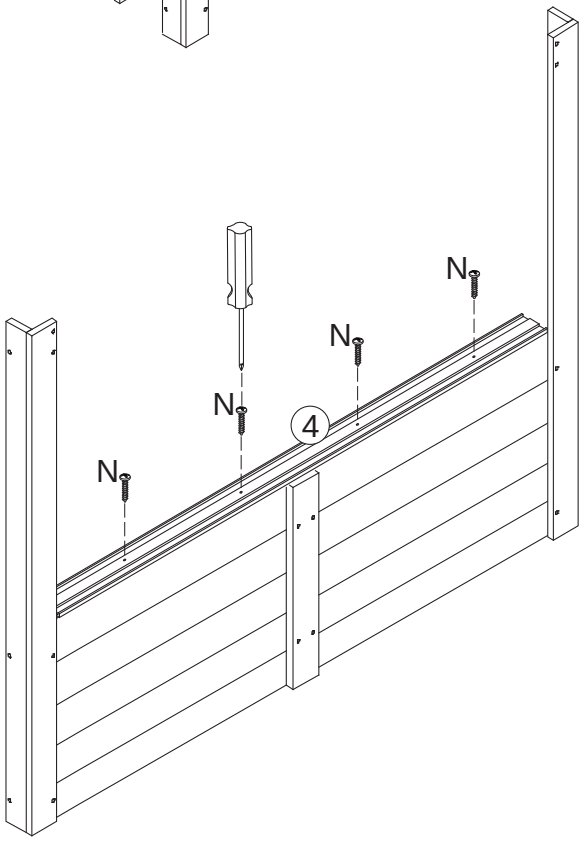

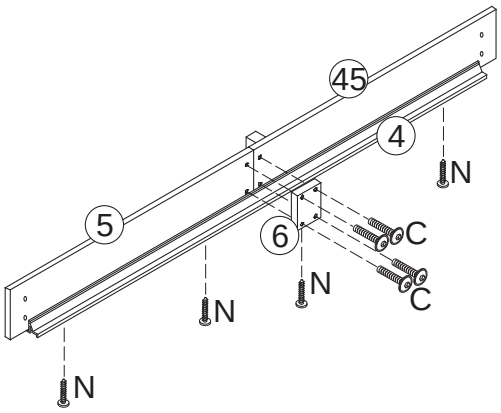

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

My Woodland Playhouse

Assembly Instructions

KidKraft Item #00155

Step 4

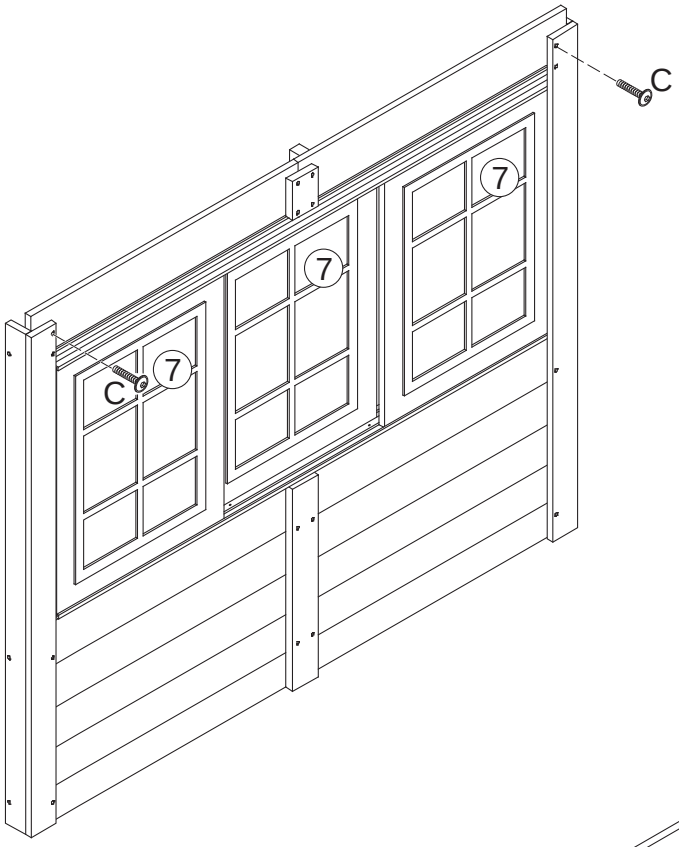

Step 5

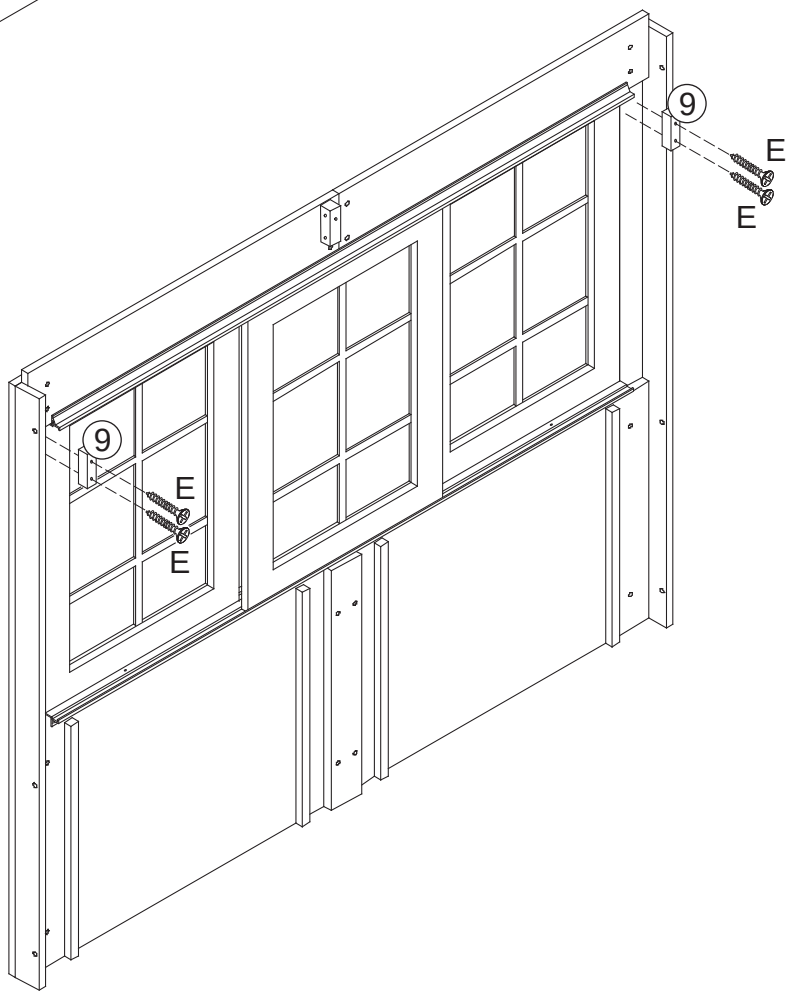

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP
KidKraft Item #00155

Step 6

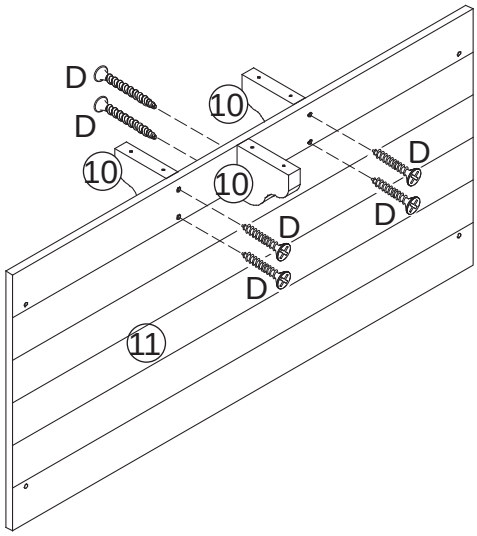

Step 7

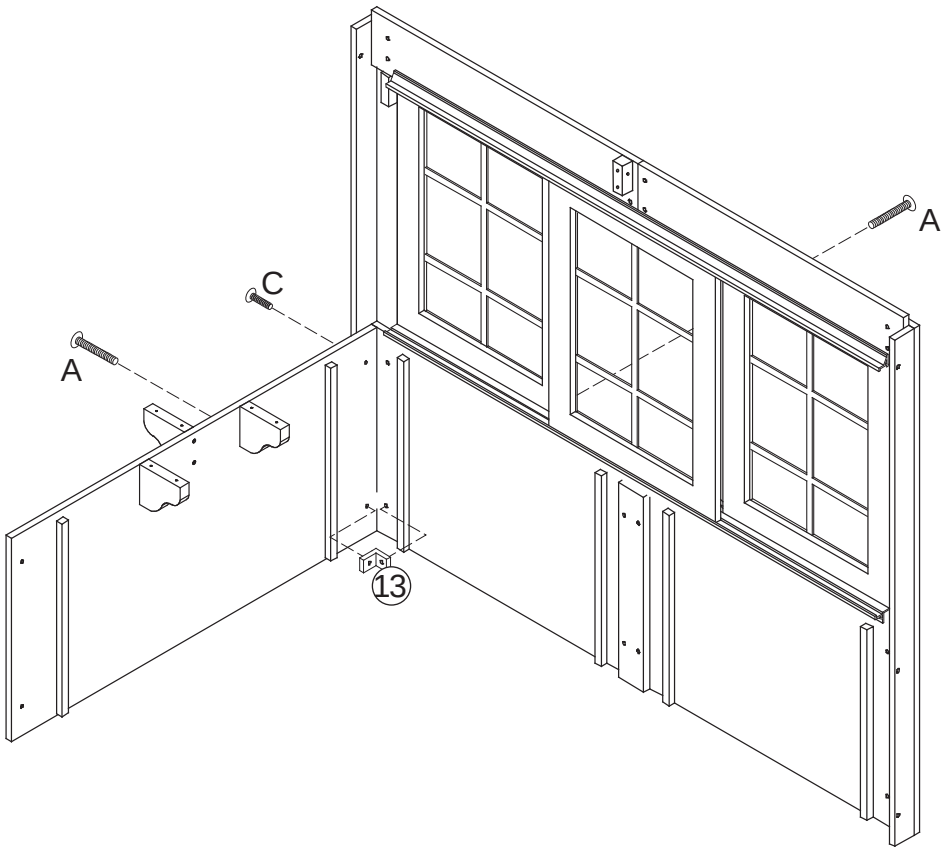

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Step 8

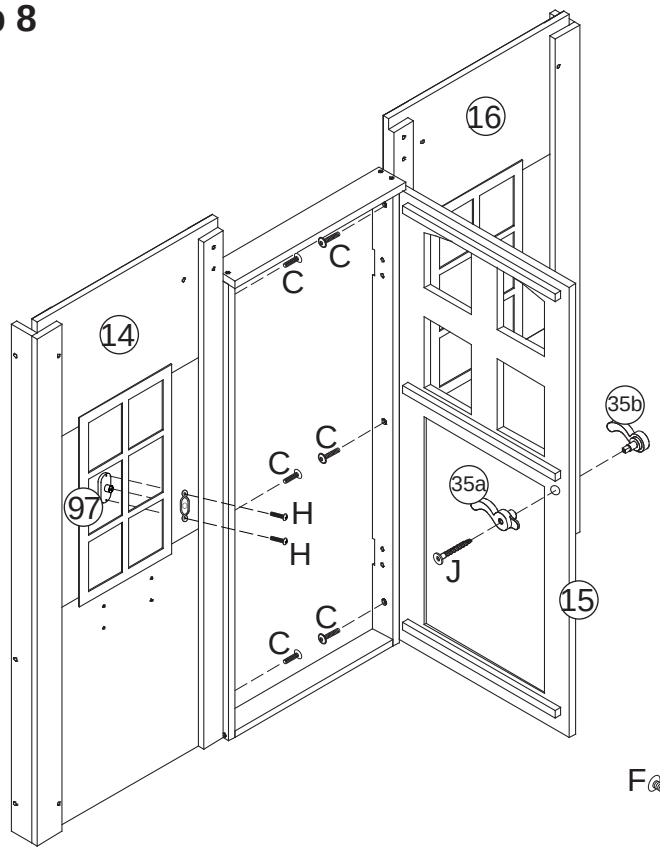

Step 9

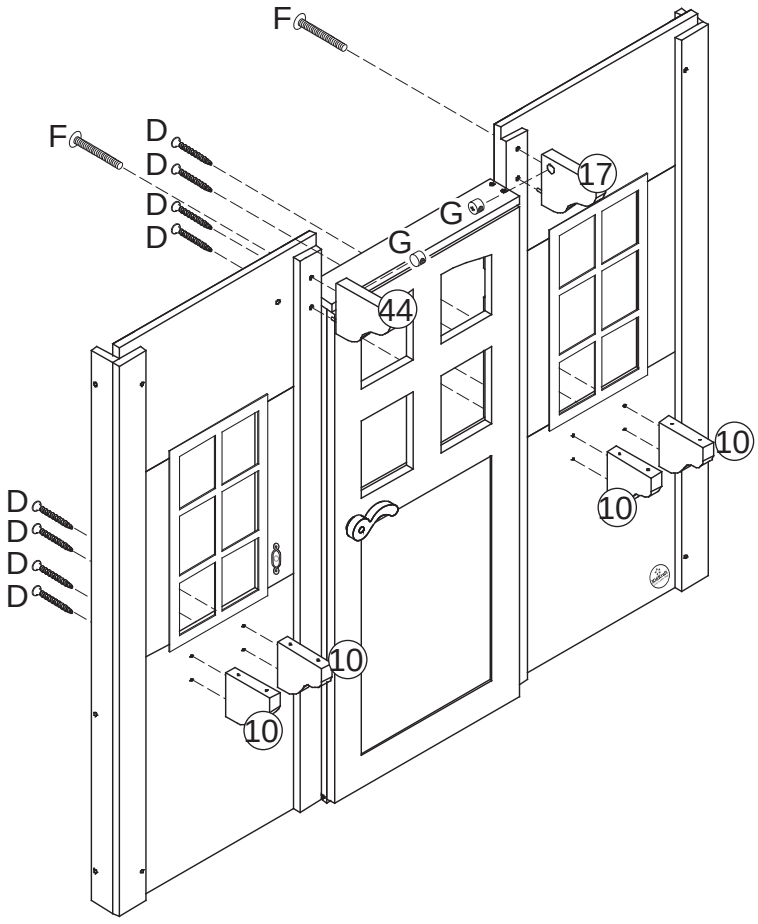

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Step 10

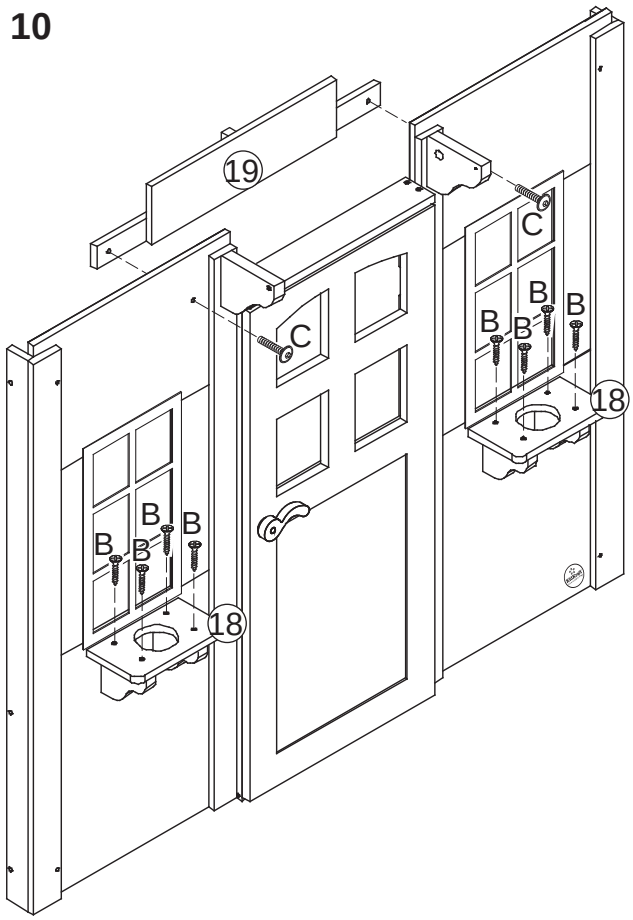

Step 11

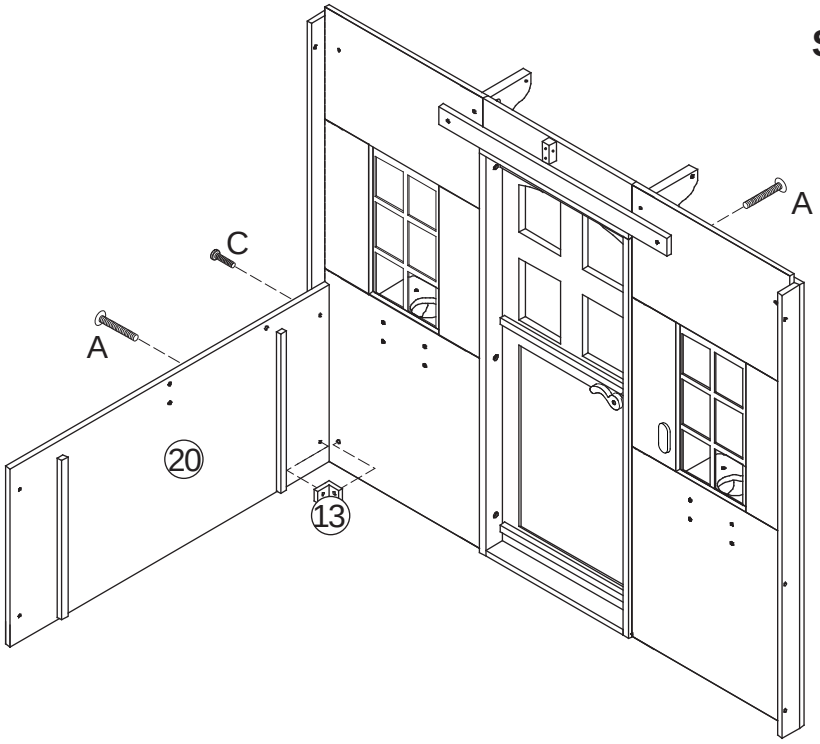

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Step 12

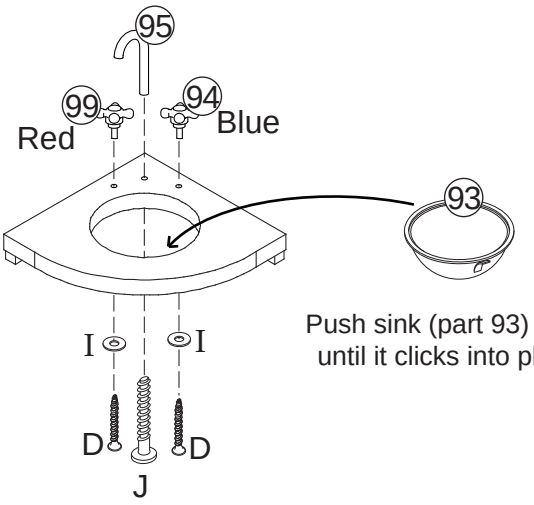

Push sink (part 93) down until it clicks into place.

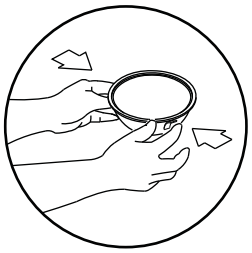

To Remove Sink: The sink may only be removed by an adult. Hold the tabs and lift through the hole to release.

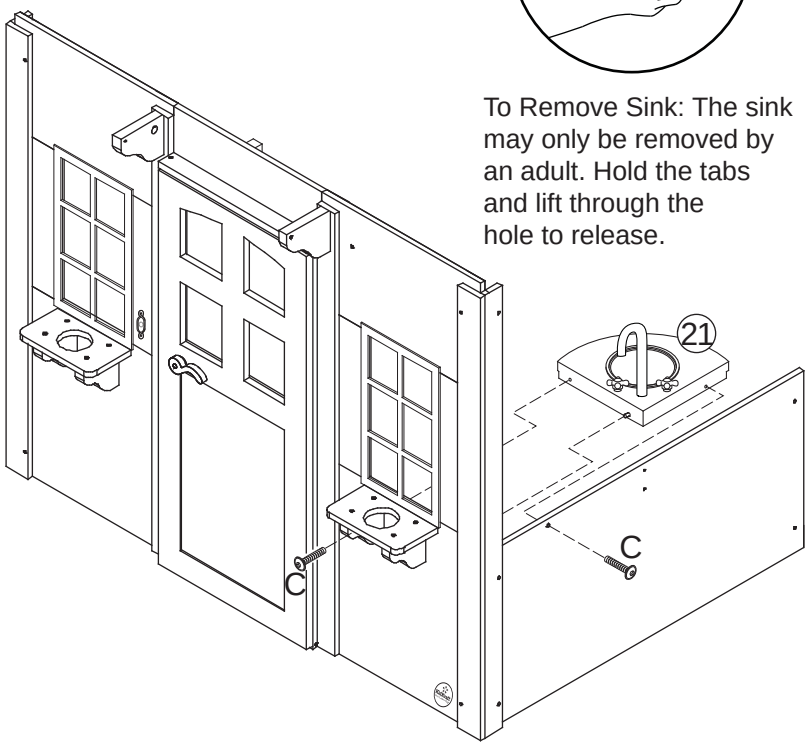

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Step 13

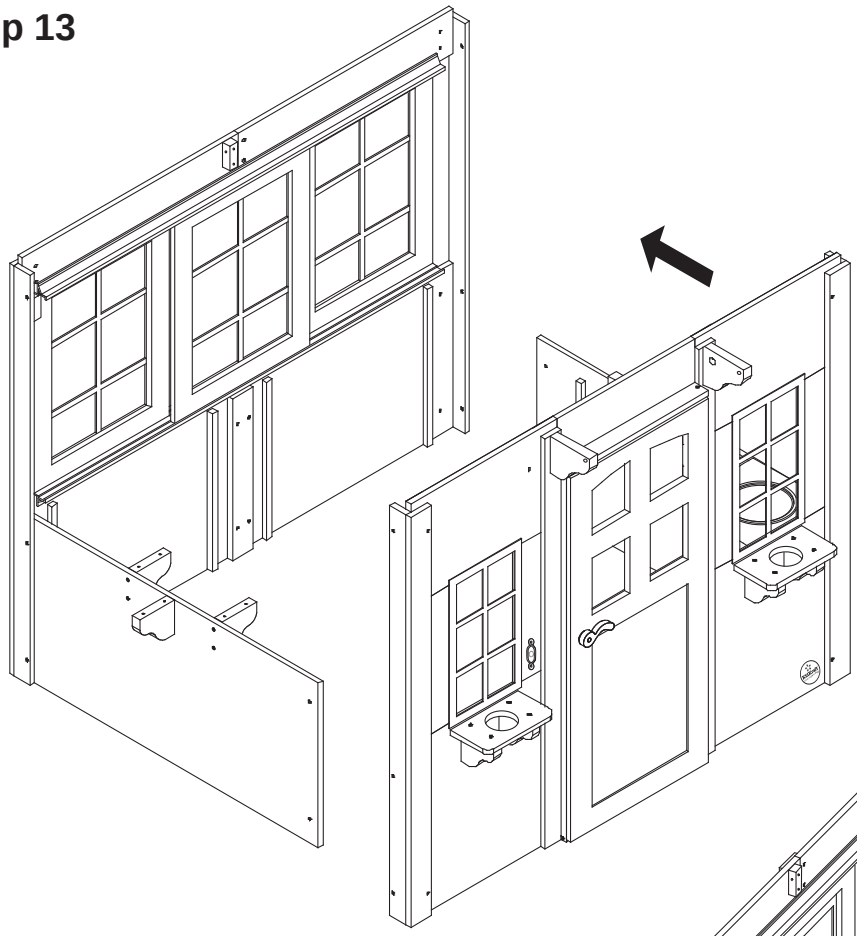

Step 14

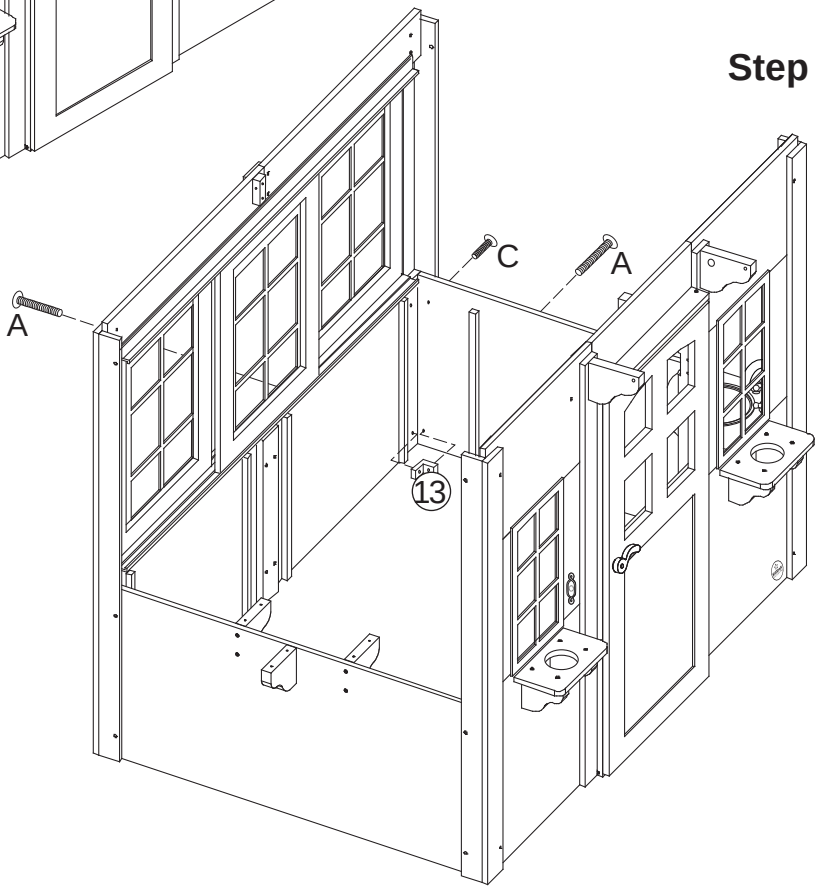

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Step 15

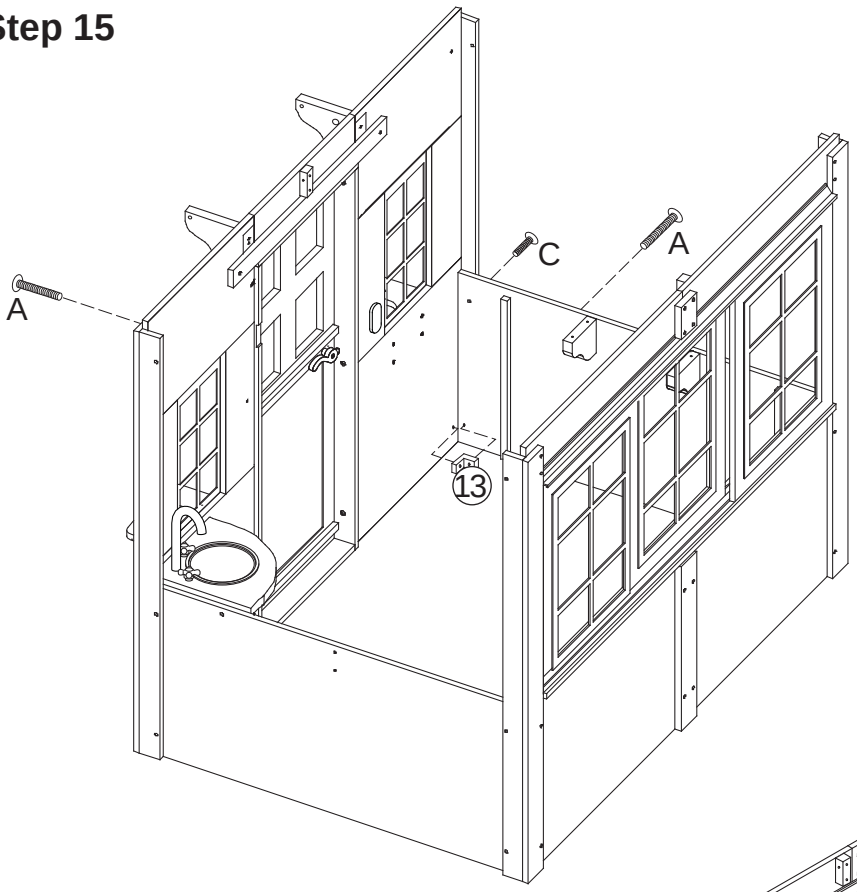

Step 16

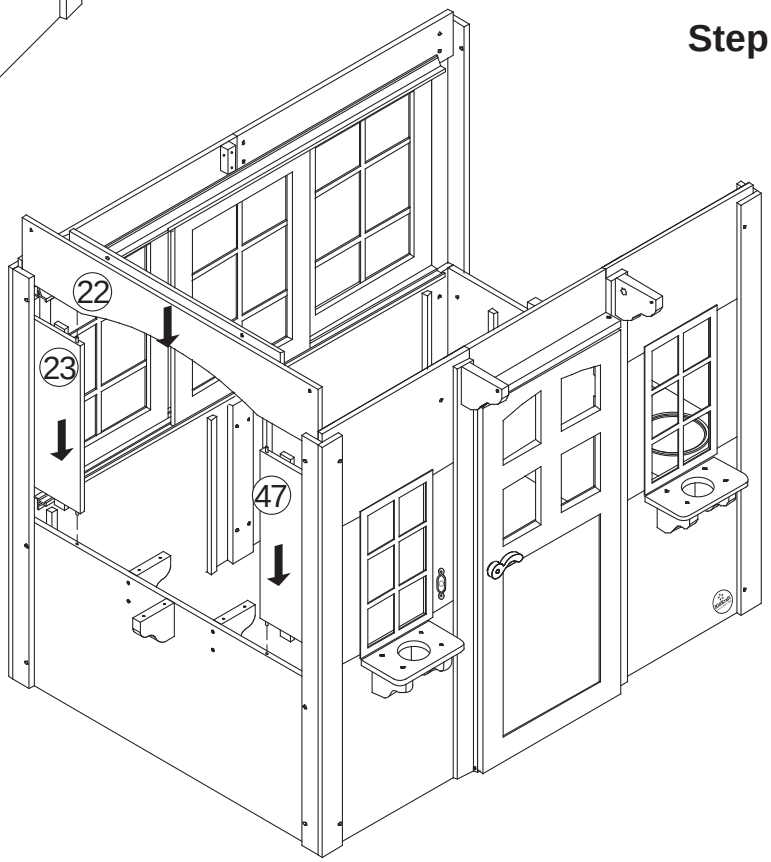

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

My Woodland Playhouse

Assembly Instructions

KidKraft Item #00155

Step 17

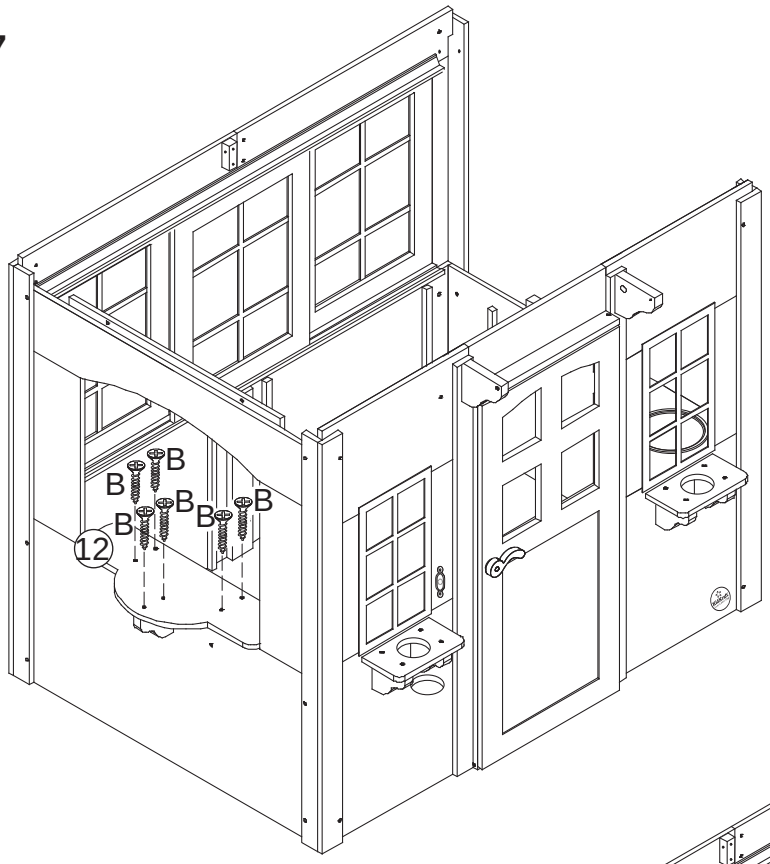

Step 18

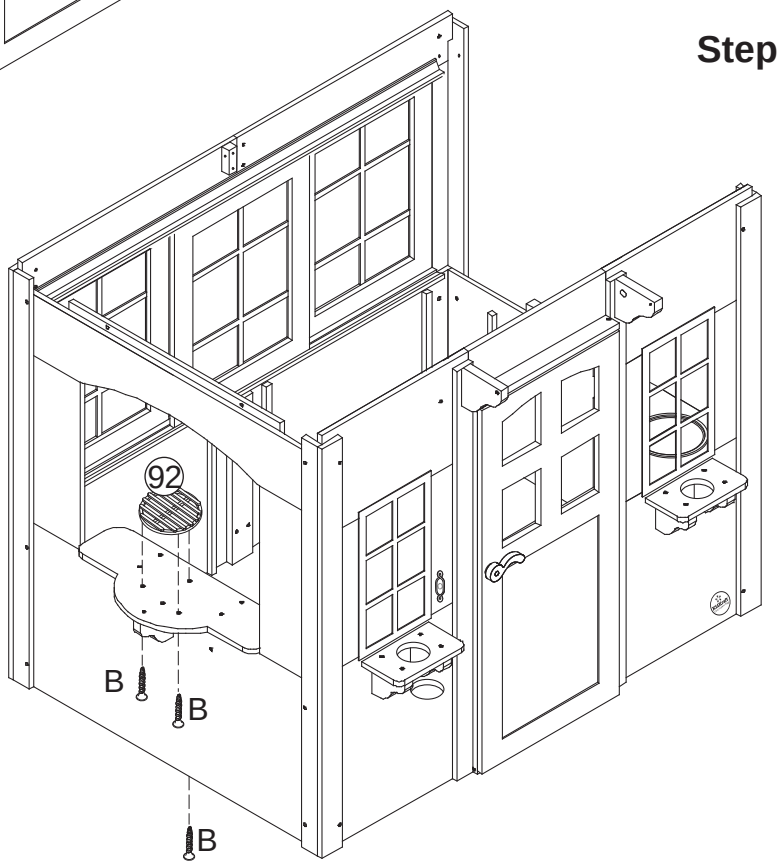

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

My Woodland Playhouse

Assembly Instructions

KidKraft Item #00155

Step 19

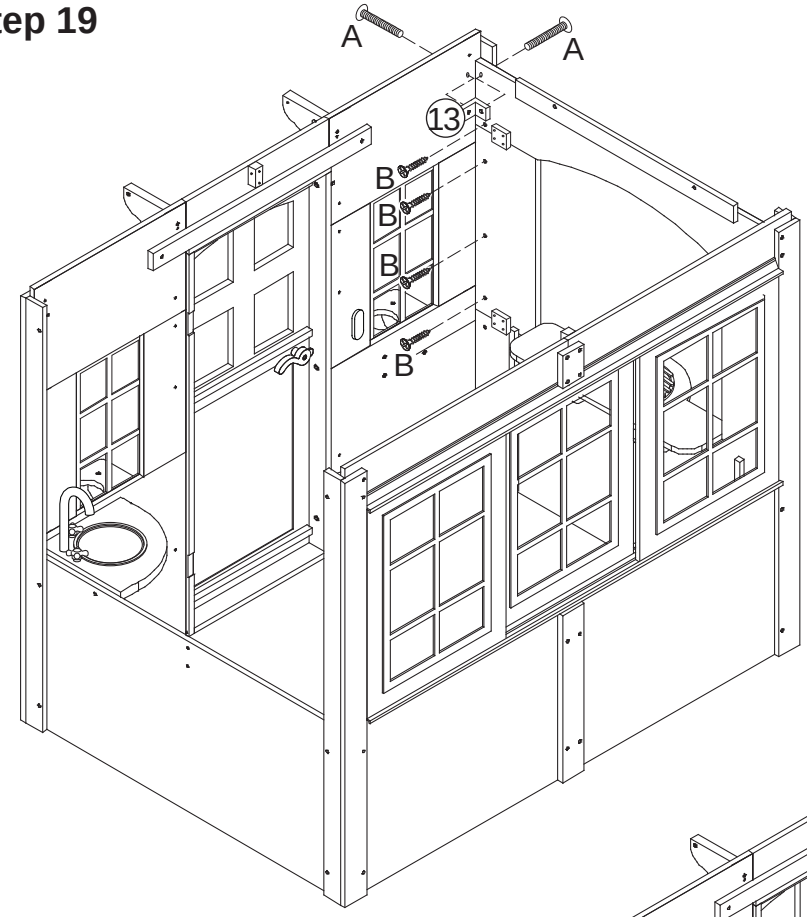

Step 20

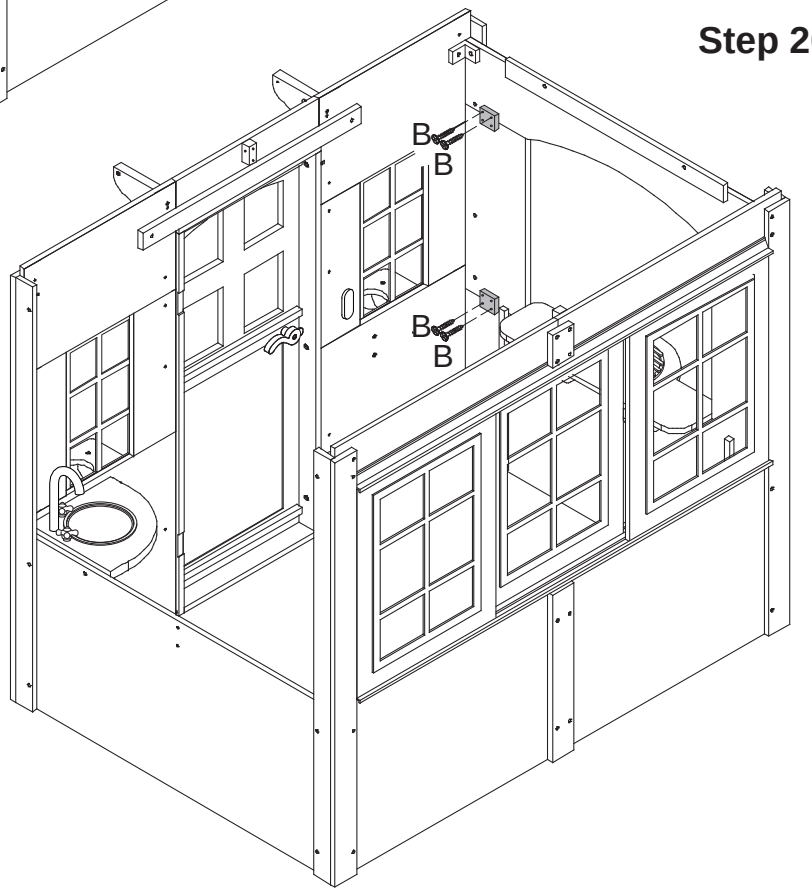

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Step 21

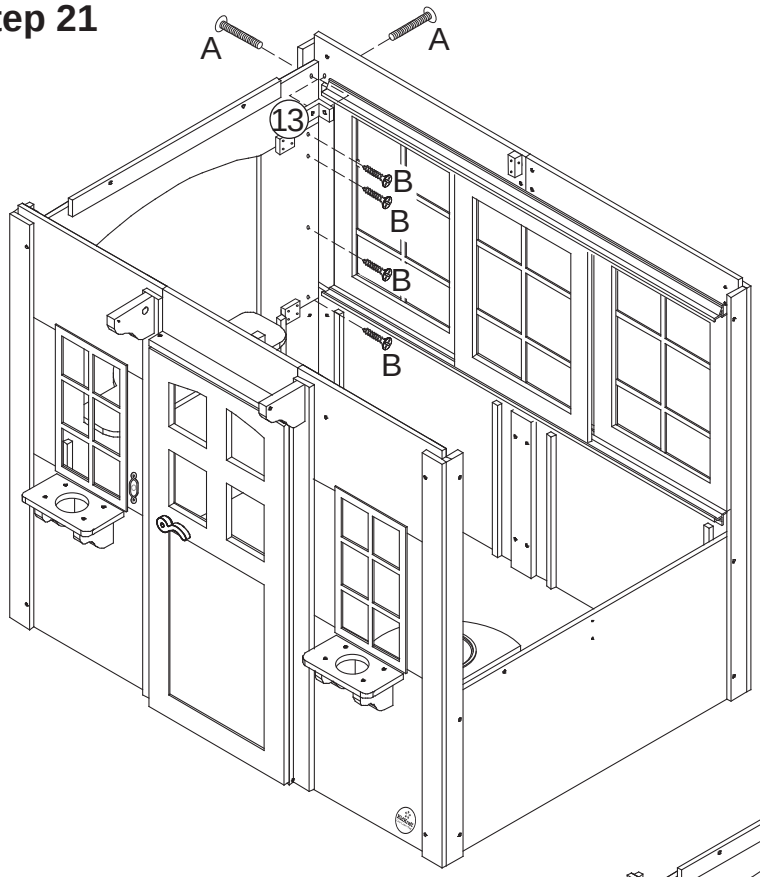

Step 22

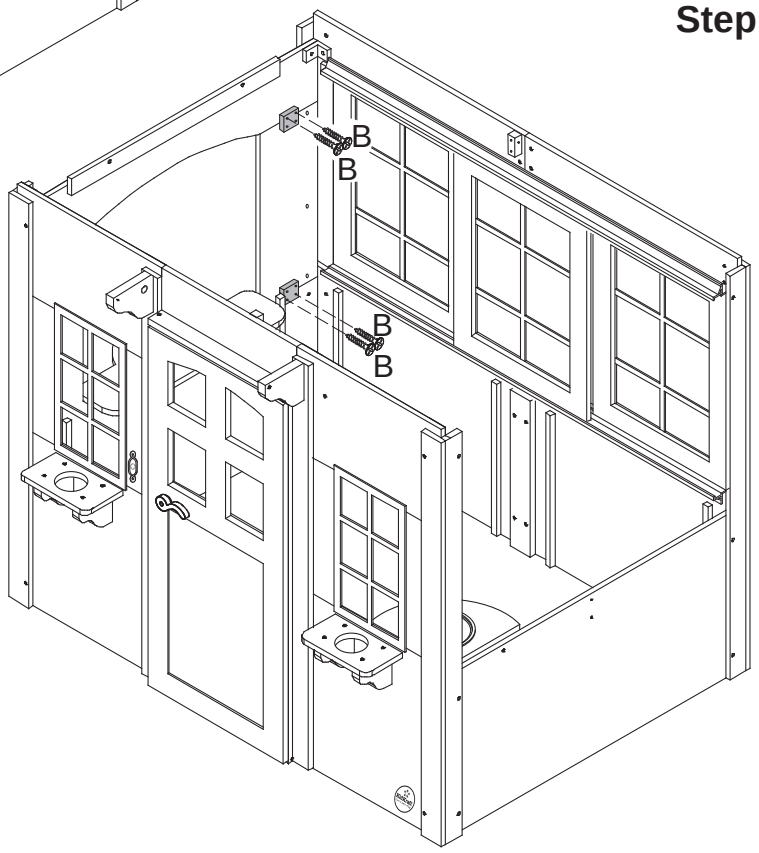

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Step 23

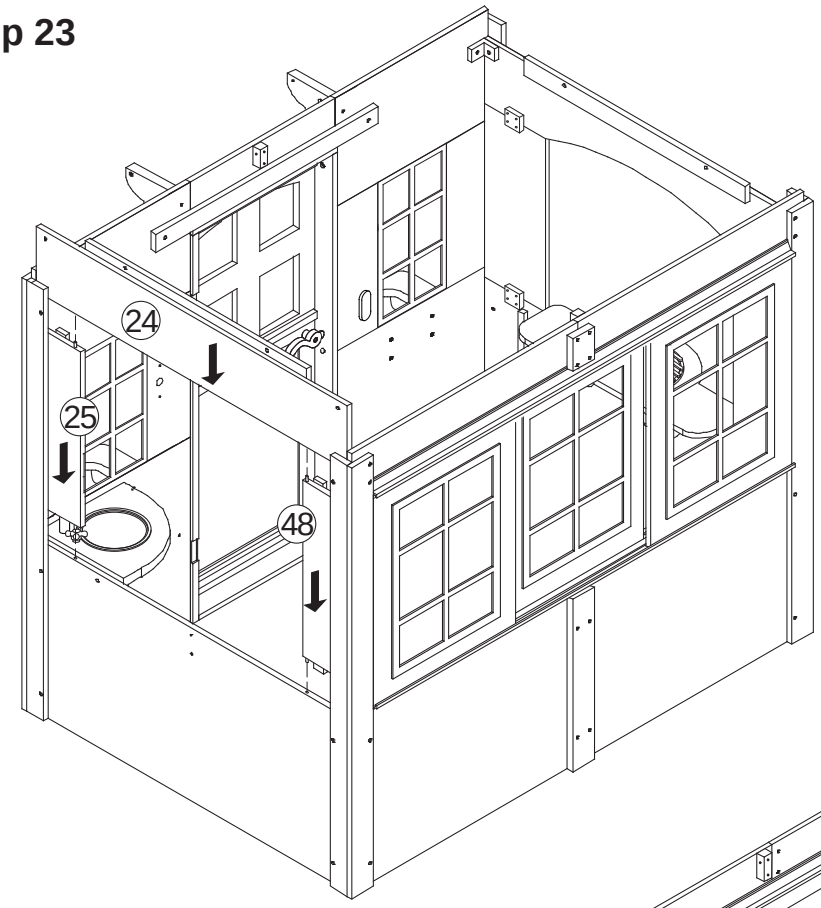

Step 24

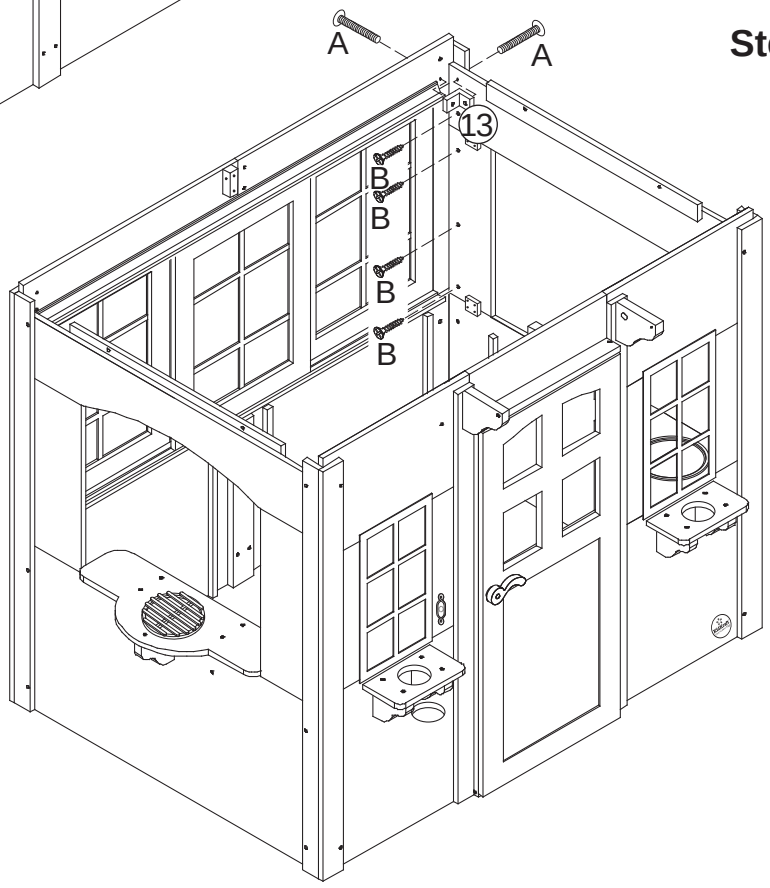

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Step 25

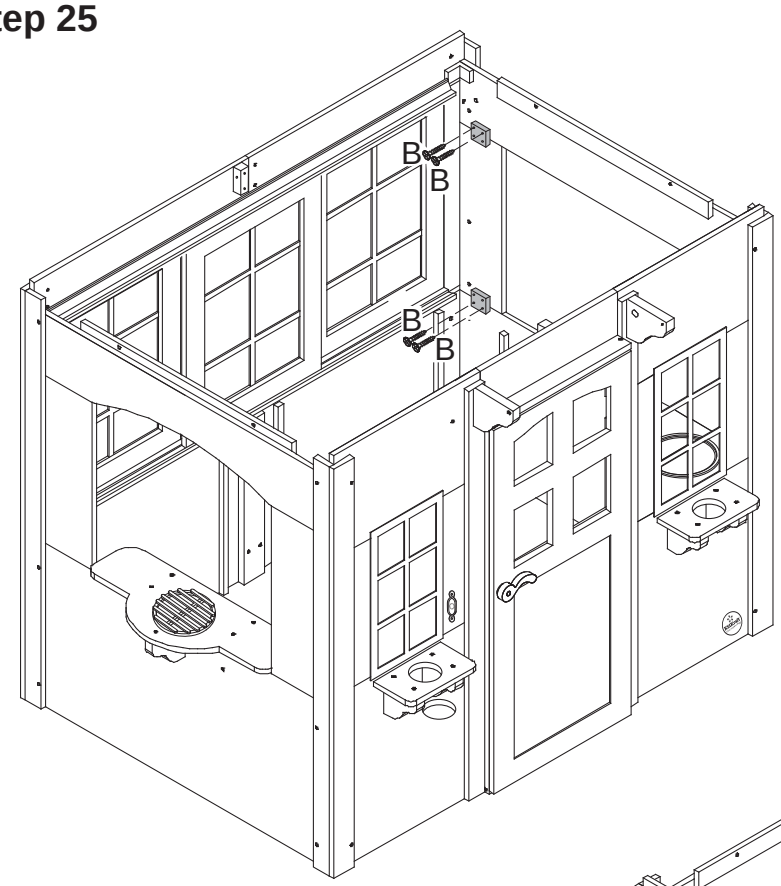

Step 26

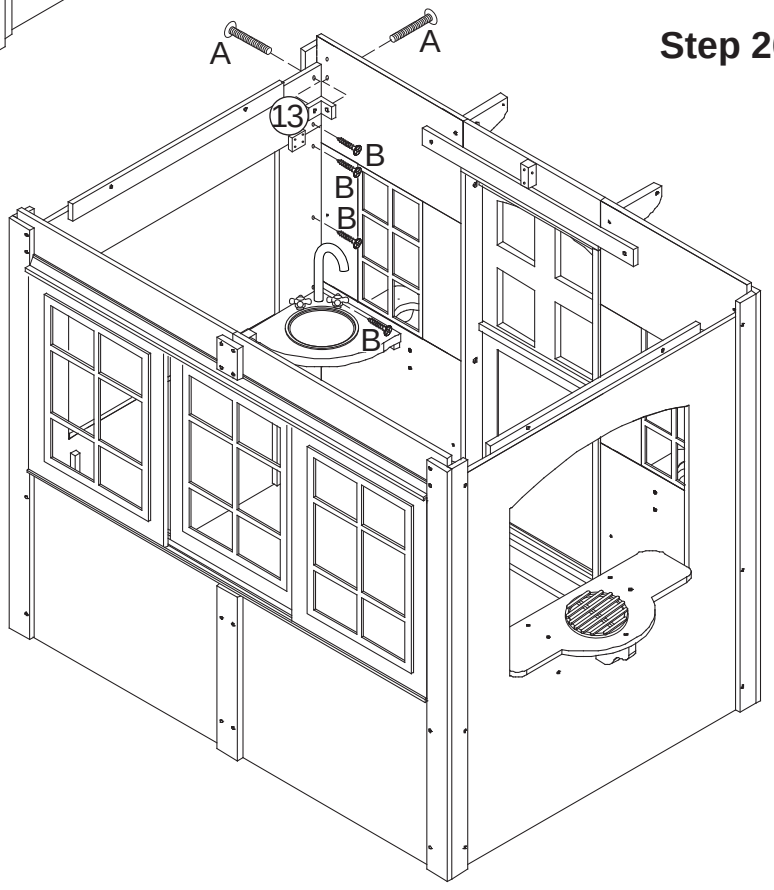

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

KidKraft Item #00155

Step 27

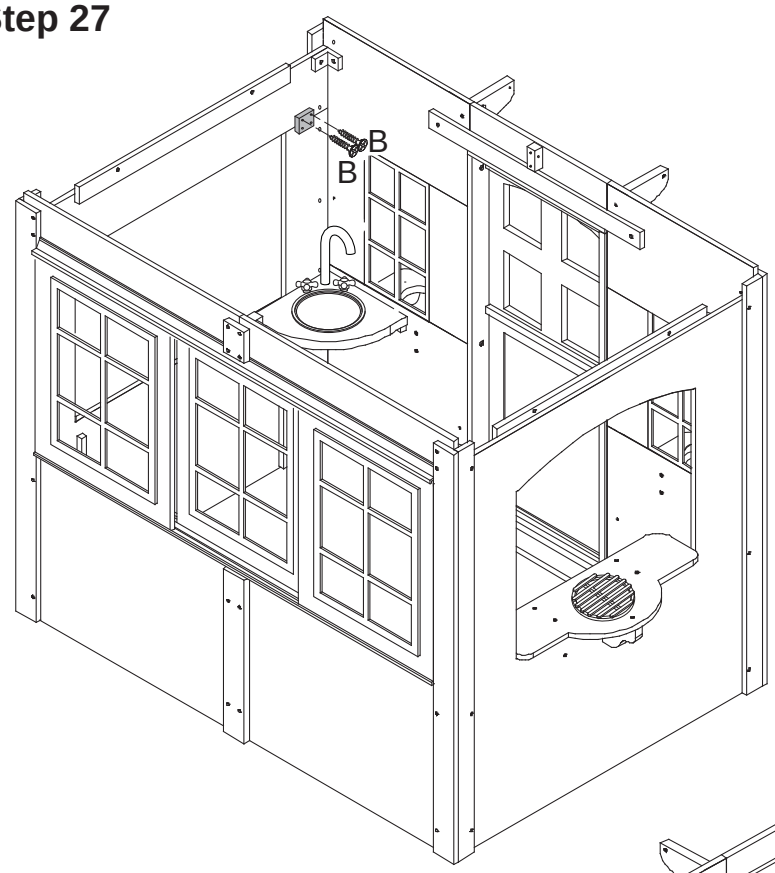

Step 28

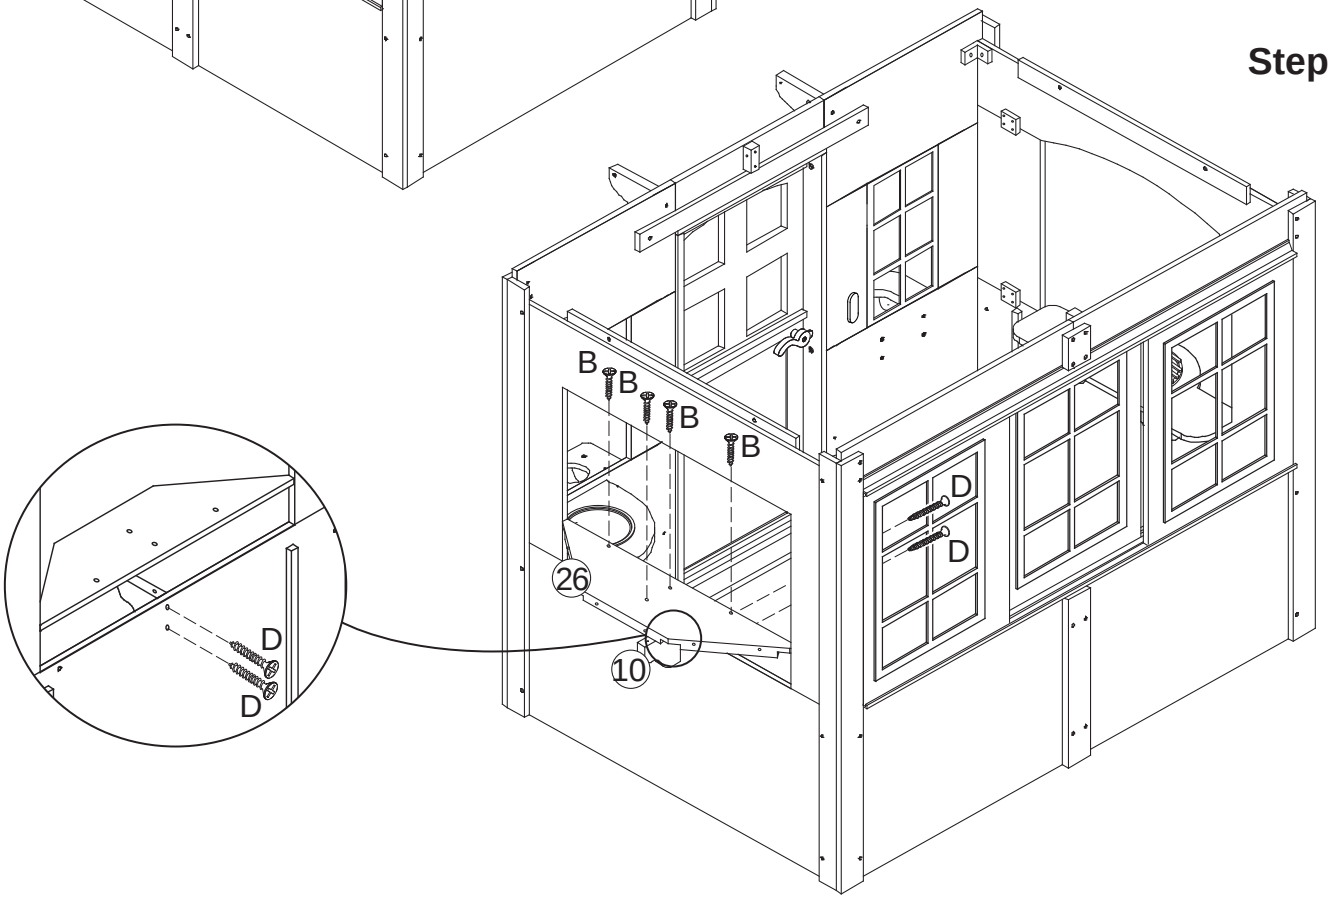

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Step 29

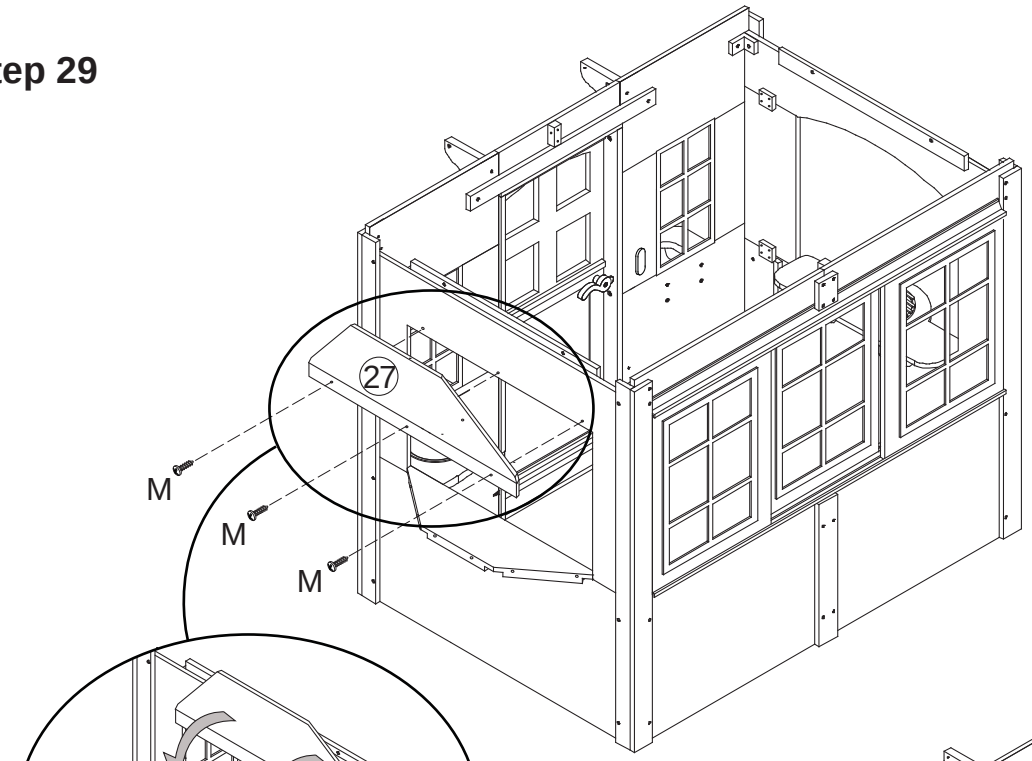

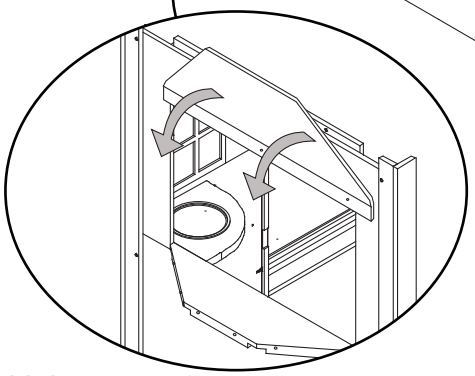

Fold down top of
part 27 after assembly

Step 30

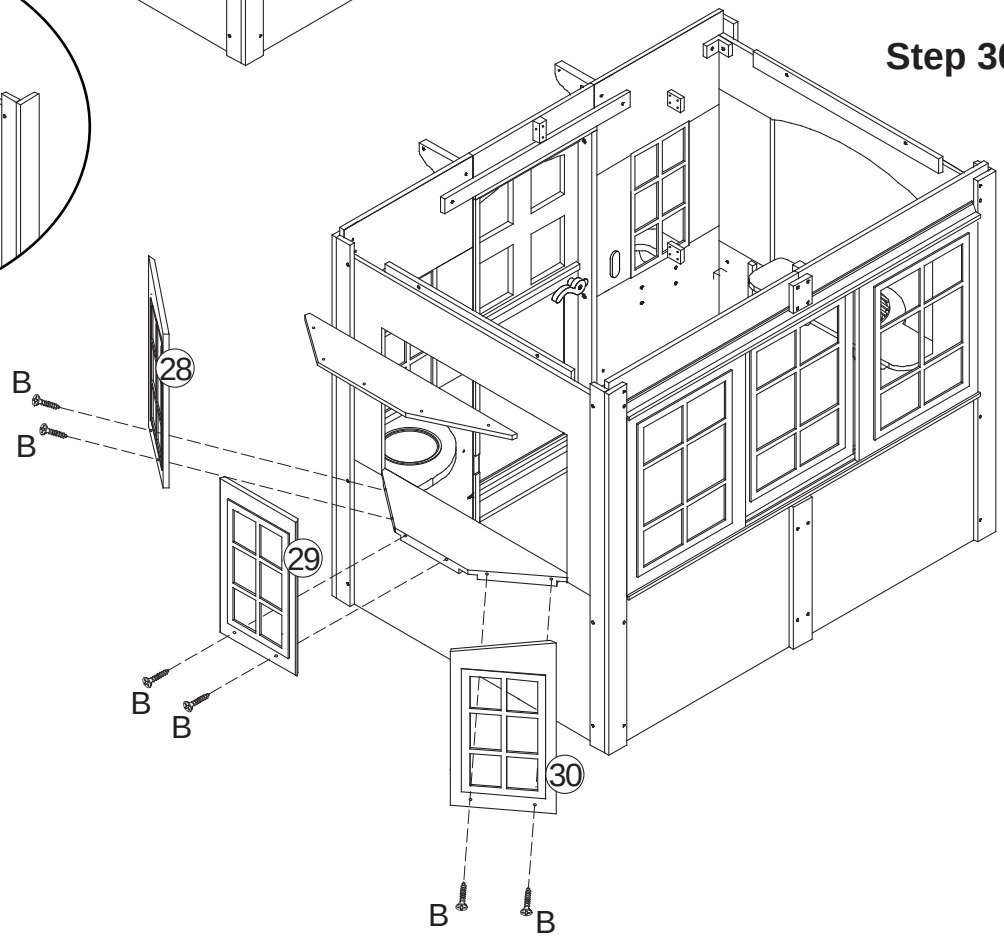

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Step 31

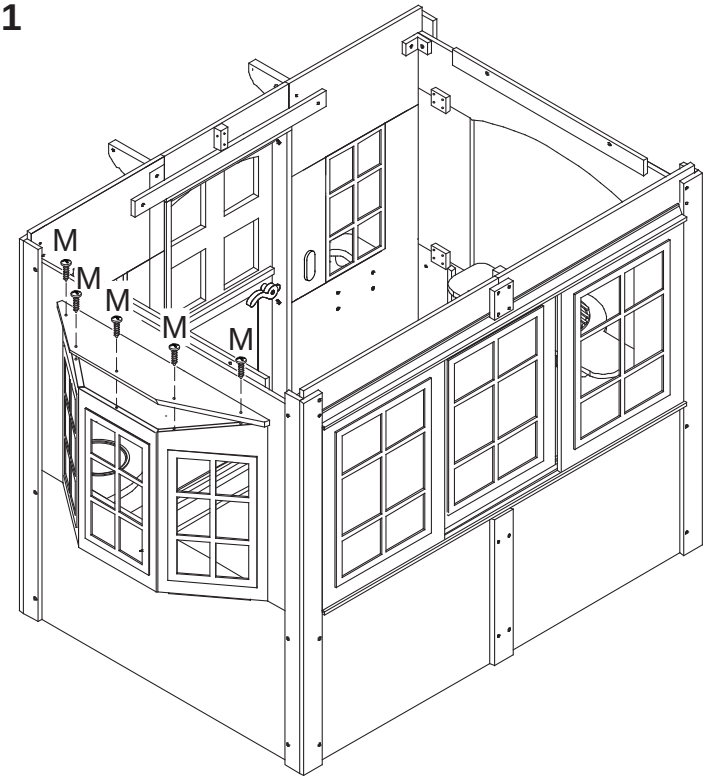

Step 32

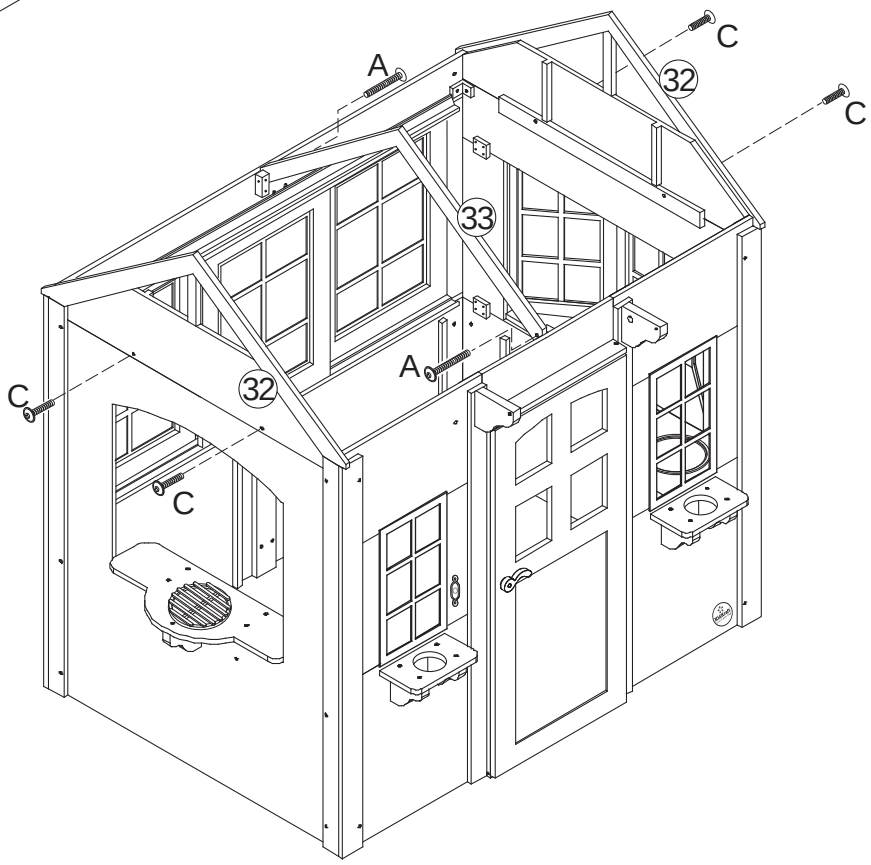

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

KidKraft Item #00155

Step 33

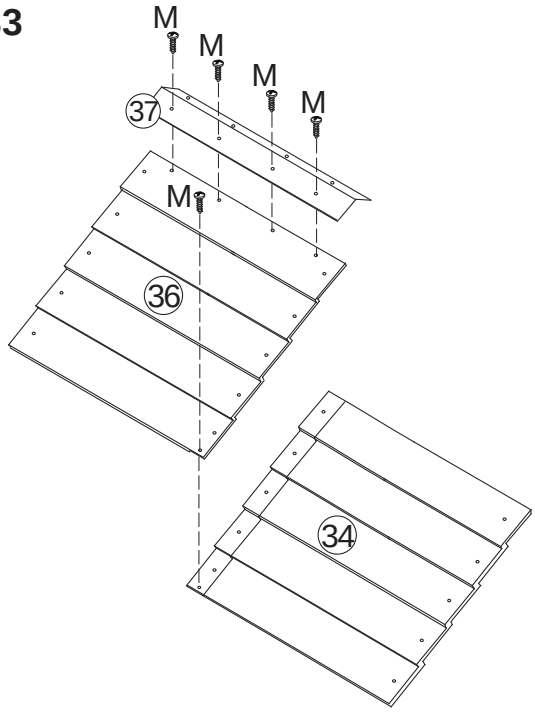

Repeat step 33 for the other side of the roof.

Step 34

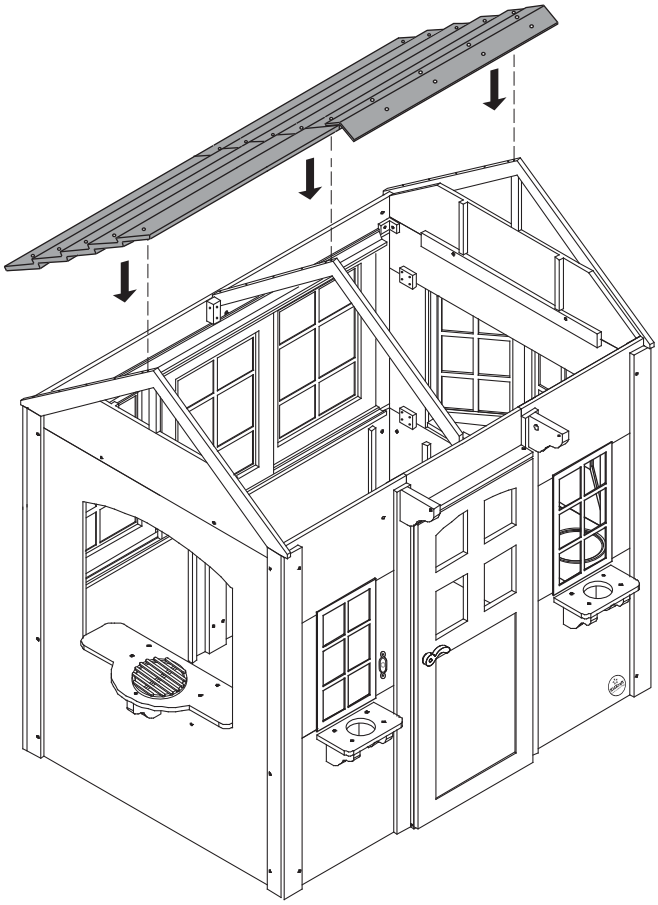

© 2010 KidKraft, LP

Step 35

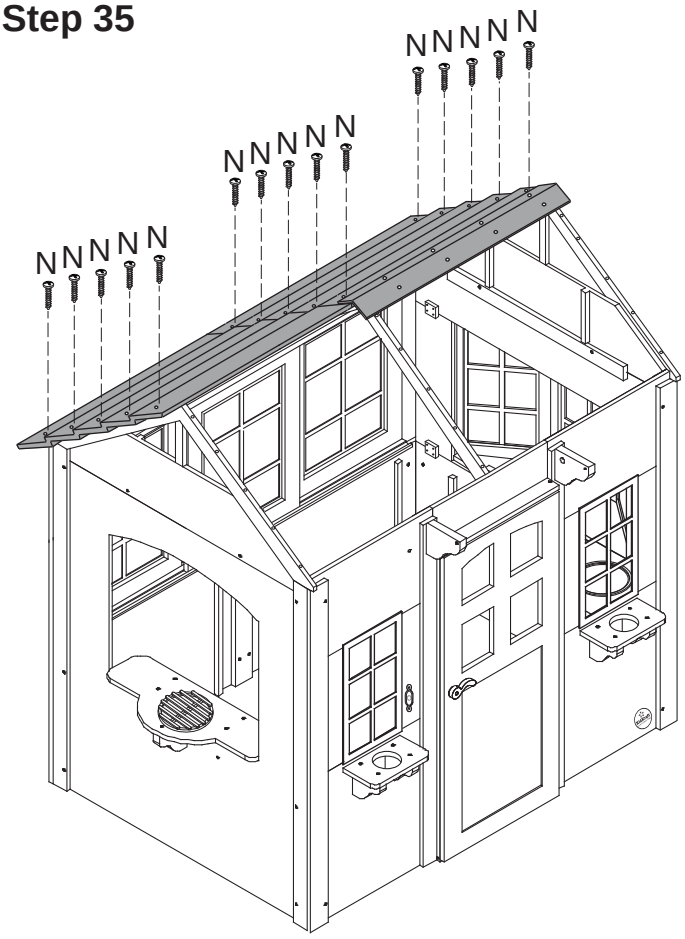

Step 36

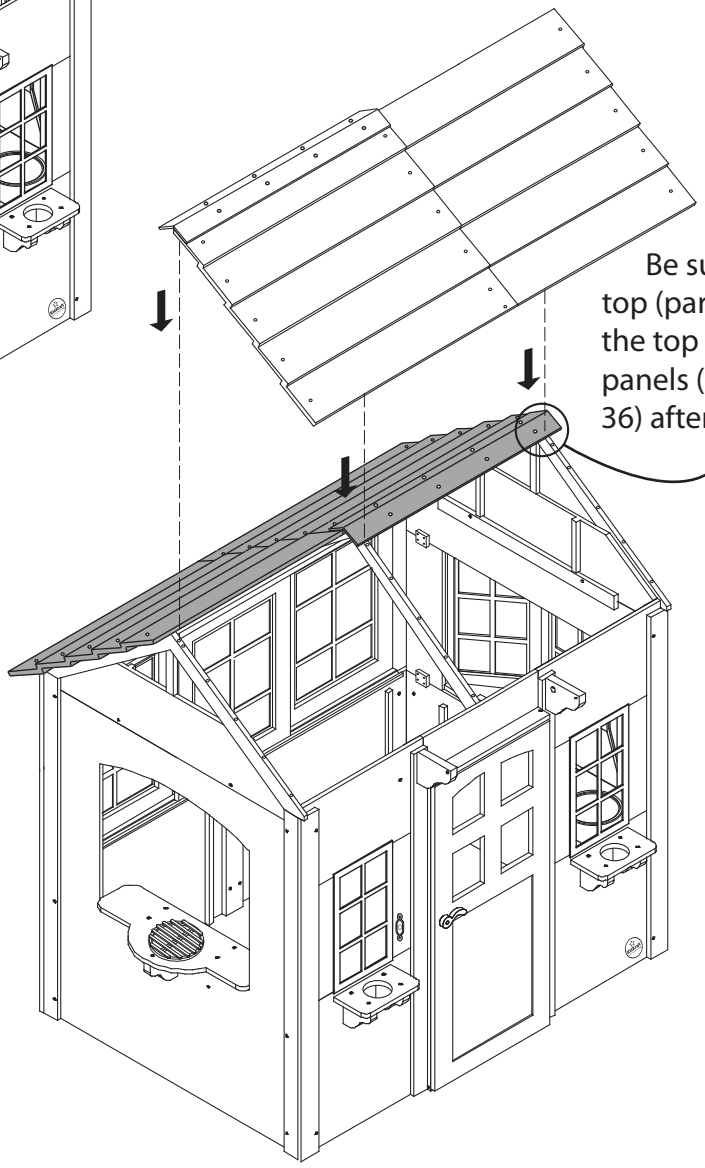

Be sure the roof top (part 37) is on the top of roof panels (parts 34 & 36) after assembly.

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Step 37

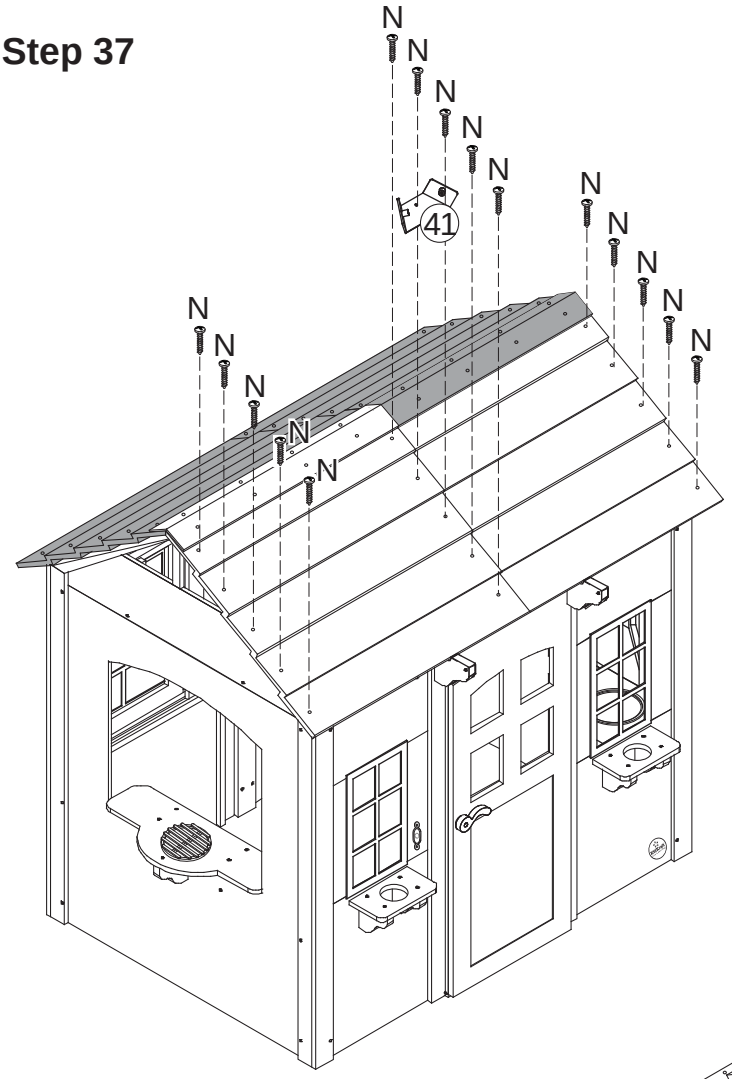

Step 38

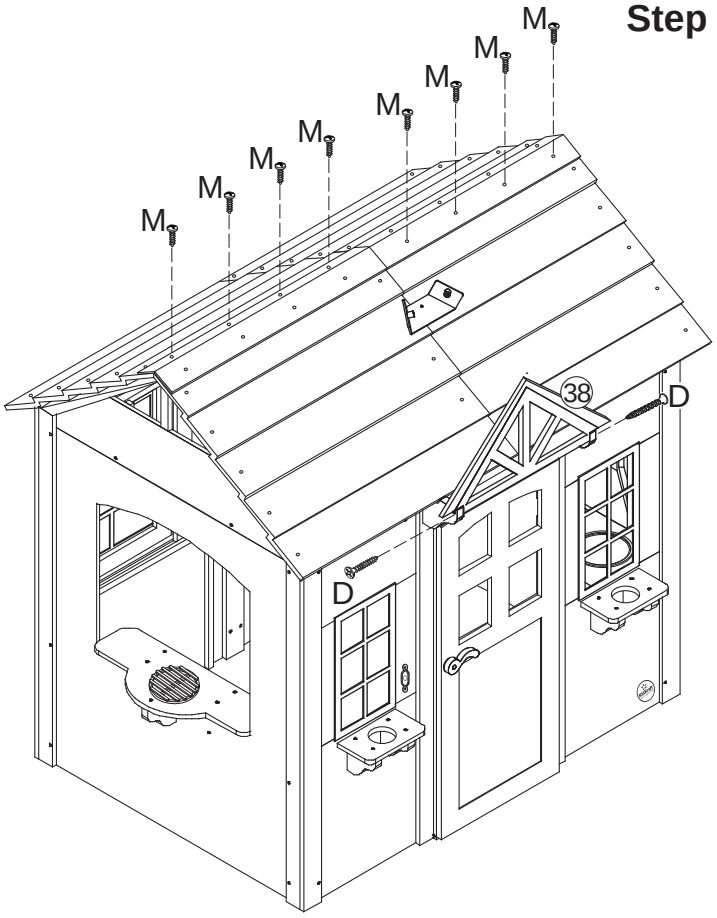

Customer Service
1-800-933-0771
www.kidkraft.com

© 2010 KidKraft, LP

Step 39

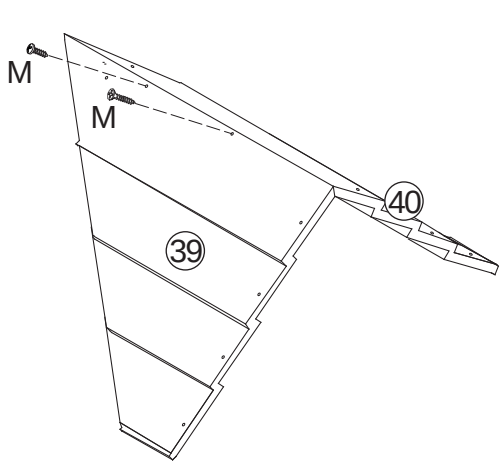

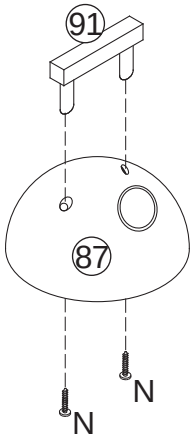

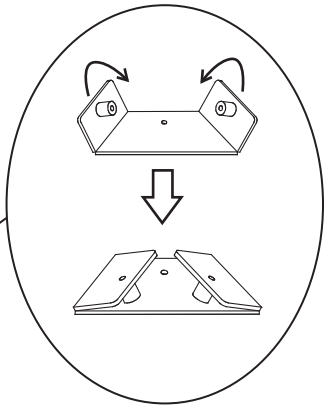

Step 40

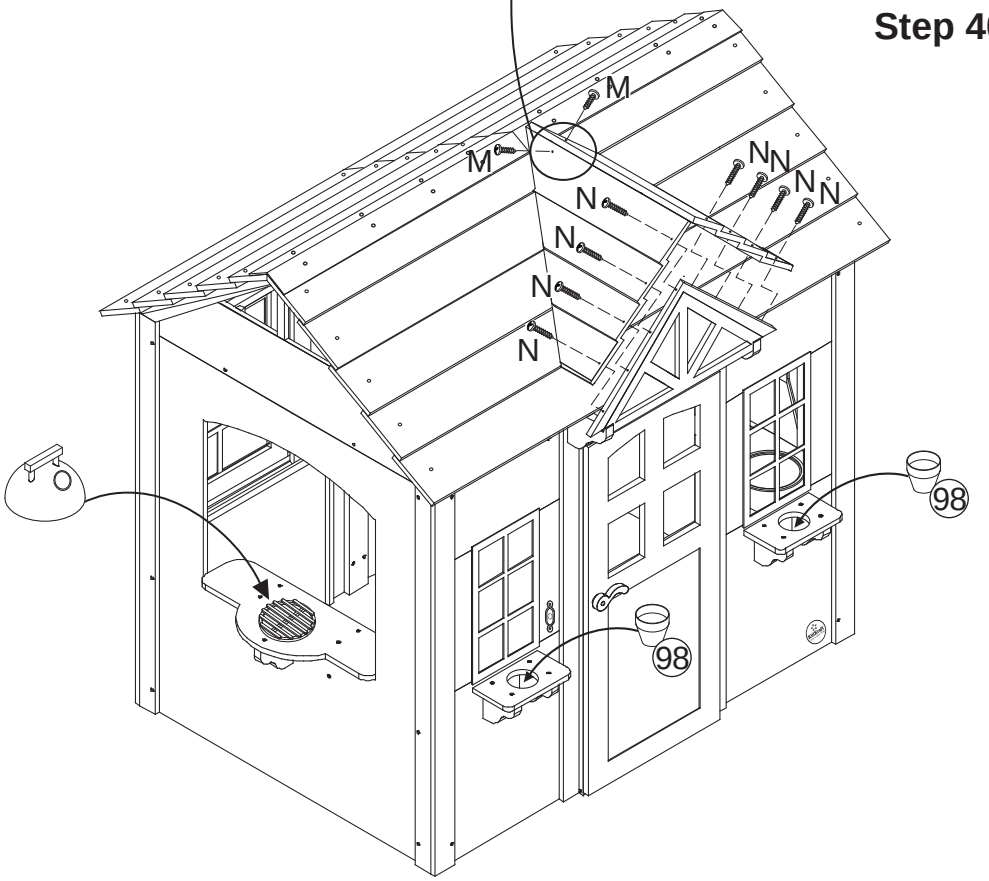

© 2010 KidKraft, LP

My Woodland Playhouse
Assembly Instructions

KidKraft Item #00155

Doorbell Battery Instructions:
Prior To Use:

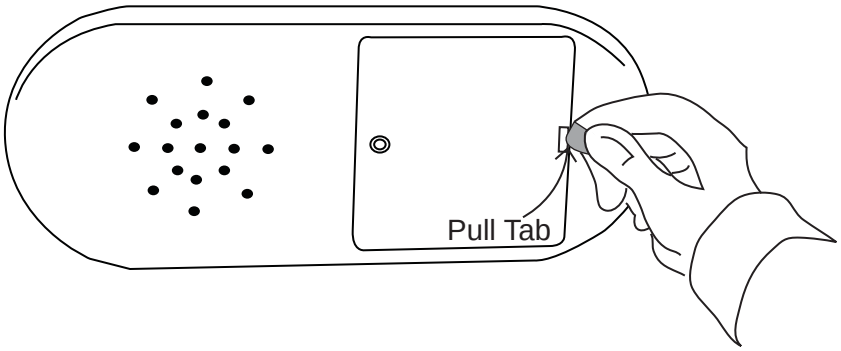

- Locate the Battery Compartment underneath the doorbell (part 44)
- Pull the tab outward to remove and activate play mode.
- Three (3) LR44 Battery (1.5 Volt) are included in each piece.

Instructions for Use:

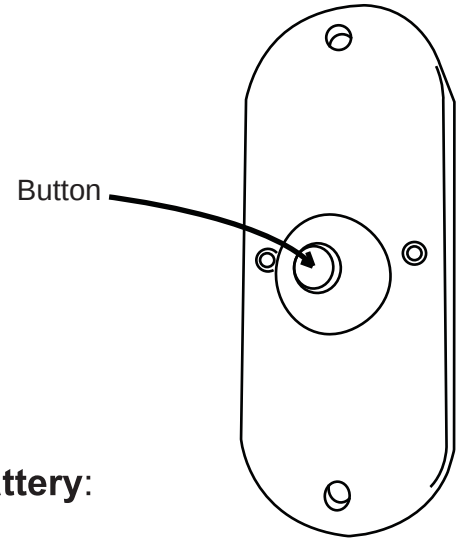

- Sounds are activated when button is pressed.

To replace battery:

Step 1

-Locate the Battery Compartment underneath the doorbell

-Use a Phillips® head screwdriver and remove cover and set aside.

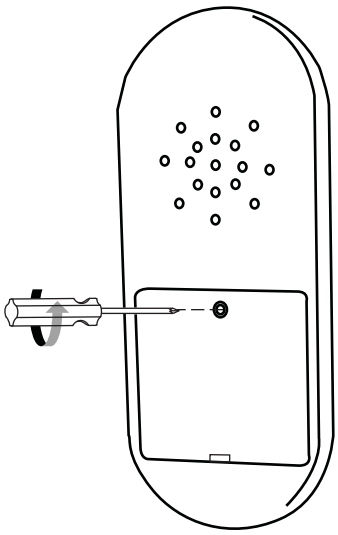

Battery Tips:

- Use only three (3) LR44 batteries (1.5 Volt).
- Batteries should always be installed and changed under adult supervision.
- Non-Rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same equivalent type as recommended are to be used.
- Batteries are to be inserted with thecorrect polarity.
- Exhausted batteries are to be removed from the toy and disposed of properly.
- The supply terminals are not to be shortcircuited.
- Different types of batteries or new and used batteries are not to be mixed.
- DO NOT mix alkaline, standard (carbon-zinc)or rechargeable batteries.
- Do not mix old and new batteries.

© 2010 KidKraft, LP

To replace battery:

Step 2

-Replace old batteries with three (3) new LR44 batteries (1.5 Volt).
-Be sure the positive (+) side is facing up.

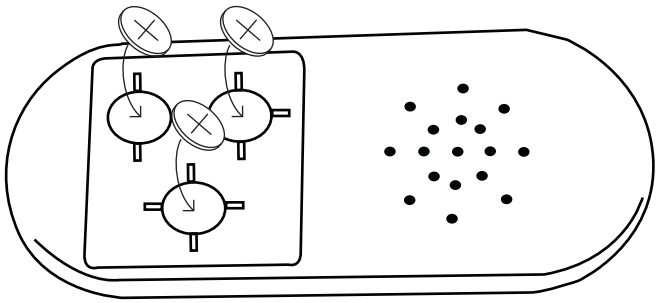

Step 3

-Screw the cover back into place with a Phillips® head screwdriver.

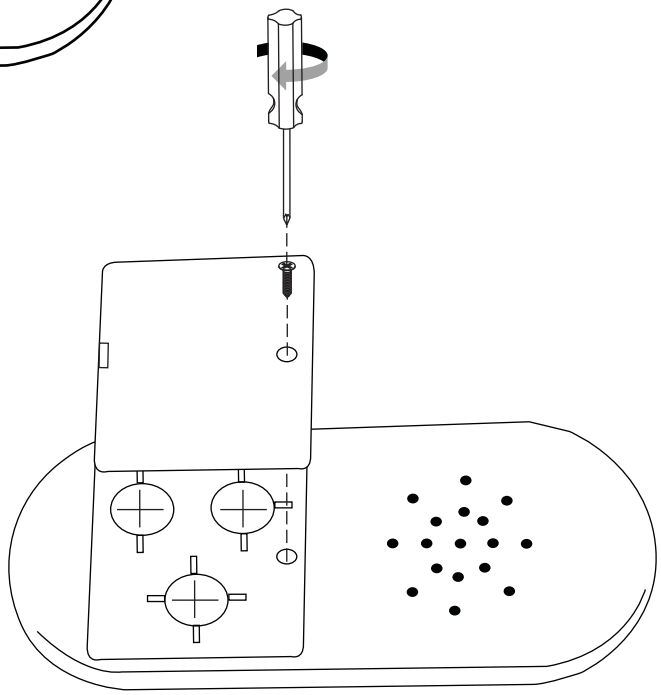

*This device complies with part 15 of the FCC rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio /TV technician for help.

IMPORTANT SAFETY NOTICE

THIS PRODUCT IS INTENDED FOR THE USE AND ENJOYMENT OF CHILDREN BETWEEN THE AGES OF 2 AND 10 YEARS OLD. IT HAS BEEN SPECIFICALLY DESIGNED AND TESTED FOR USE BY CHILDREN OF THAT AGE RANGE. PARENTAL SUPERVISION AND INSPECTION IS ALWAYS REQUIRED TO PREVENT INJURY AND MISUSE OR DEGRADATION OF THE PRODUCT, REGARDLESS OF THE AGE OF THE CHILD. USE OF THE PRODUCT BY PERSONS OTHER THAN CHILDREN OF THE INTENDED AGE MAY RESULT IN INJURY TO THE USER OR BYSTANDER OR BREAKAGE OF THE PLAYHOUSE. CONTINUED PARENTAL SUPERVISION AND INSPECTION IS VITAL TO THE SAFE USE OF THE PRODUCT AS PARTS MAY BREAK OFF OR COME LOOSE OVER TIME AND DURING USE, AND SHARP EDGES MAY RESULT FROM MISUSE, HEAVY USE, AGE OF THE PRODUCT, OR THE ENVIRONMENT, INCLUDING RECURRING HEAT, COLD AND WATER. TO SAFEGUARD THE CHILD AND PROLONG THE SAFE LIFE OF THE PRODUCT, FOLLOW THE ENCLOSED ASSEMBLY AND MAINTENANCE INSTRUCTIONS CAREFULLY AND HONOR ALL WARNINGS. INSPECT FOR LOOSE, UNSTABLE, SHARP AND BROKEN PARTS FREQUENTLY. DO NOT PERMIT CHILDREN TO CLIMB OR JUMP OFF UNIT. SHOULD YOU HAVE ANY QUESTIONS OR CONCERNS, CONTACT KIDKRAFT CUSTOMER SERVICE AT 1-800-933-0771. REPLACEMENT PARTS MAY BE AVAILABLE FREE OF CHARGE.

MAINTENANCE

THIS IS AN OUTDOOR WOOD PRODUCT THAT NATURALLY WEATHERS WITH AGE. TO ENSURE OPTIMAL, LONG-TERM DURABILITY AND FUN, TREATMENT WITH AN OIL-BASED OUTDOOR WOOD SEALER IS REQUIRED. WOOD SEALER CAN BE PURCHASED AT YOUR LOCAL HARDWARE STORE, AND SHOULD BE APPLIED AT FIRST SIGNS OF WEATHERING.

IF YOU HAVE ANY QUESTIONS REGARDING MAINTENANCE AND CARE OF YOUR PRODUCT, PLEASE FEEL FREE TO CALL US AT 1-800-933-0771.

TO PROLONG THE LIFE OF YOUR OUTDOOR ITEM, PLEASE STORE OUT OF DIRECT SUNLIGHT OR EXPOSURE TO EXTREME WEATHER.

SOLE AND LIMITED WARRANTY

THIS PRODUCT IS WARRANTED SOLELY AGAINST MANUFACTURING DEFECTS FOR A PERIOD OF 90 DAYS FROM THE DATE OF PURCHASE, WHICH RUNS ONLY TO THE ORIGINAL USER OF THE PRODUCT. IN THE EVENT OF A MANUFACTURING DEFECT, PARTS WILL BE REPLACED OR THE ENTIRE PRODUCT WILL BE REPLACED OR THE PURCHASE PRICE WILL BE REFUNDED, AT THE ELECTION OF THE MANUFACTURER. TO ACTIVATE AND PROTECT THIS WARRANTY, PRESERVE EVIDENCE OF ORIGINAL PURCHASE AND CAREFULLY INSPECT THE CONDITION OF THE PRODUCT PRIOR TO AND AFTER ASSEMBLY, LOOKING FOR MISSING, DEGRADED, BROKEN, IMPROPERLY SIZED OR HAZARDOUS PARTS, INCLUDING PARTS WHICH CAN BE SWALLOWED BY A CHILD, CAUSE A CHILD TO CHOKE, OR OTHERWISE CAUSE INJURY. SUCH PARTS MAY INCLUDE LOOSE SCREWS, EXPOSED NAILS OR SHARP EDGES. SHOULD YOU OBSERVE ANY DEFECTS, DO NOT USE THE PRODUCT AND IMMEDIATELY NOTIFY THE MANUFACTURER. FAILURE TO DO SO SHALL CONSTITUTE MISUSE. MISUSE, IMPROPER ASSEMBLY, FAILURE TO HONOR A WARNING, FAILURE TO SUPERVISE, INSPECT OR MAINTAIN THE PRODUCT, OR DAMAGE TO THE PRODUCT, WHETHER INTENTIONAL OR INADVERTENT, SHALL INVALIDATE THIS WARRANTY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

TO SUBMIT A WARRANTY CLAIM PLEASE CONTACT KIDKRAFT CUSTOMER SERVICE AT 1-800-933-0771 FOR INSTRUCTIONS ON HOW TO PROVIDE PROOF OF PURCHASE AND HOW TO RETURN THE ITEM FREIGHT PRE-PAID.

CUSTOMER SERVICE 1-800-933-0771

www.kidkraft.com